



The fan coil thermostats are designed for use in commercial buildings, hotels, hospitals, and airports etc. These devices support 2-pipe. Equipped with microprocessor-based control and large backlit LCD screens, the thermostats provide clear information on operational status (cooling, heating, and ventilation), fan speed, room temperature, and set point.


Mounting Method

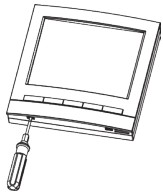


Step 1
Disassemble the main control board by using a 3.5mm wide flat screwdriver. Insert it 4mm deep into the card slot along the slope, then gently pry upward with slight force to release the hook mechanism.

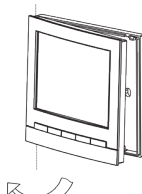


Step 2
Lift the upper shell upward to separate it from the lower shell.

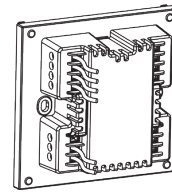

Step 3
Connect the wiring correctly according to the provided wiring diagram.

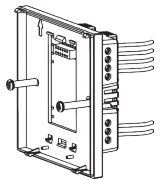

Step 4
Take out the screws from the packaging box, then mount the lower case onto the wall junction box following the orientation shown in the figure.

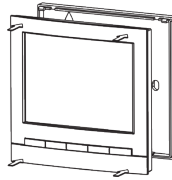


Step 5
Align the pin headers and female connectors between the upper and lower shells of the thermostat. Push the upper shell straight back onto the lower shell until you hear a "click" sound, confirming that the installation is complete.



Warning:
This product must be installed by a qualified professional. Please read this manual thoroughly before installation. Improper installation may result in damage to the equipment. Ensure all wiring is done correctly and strictly follows the provided wiring diagram.

Wiring Diagram

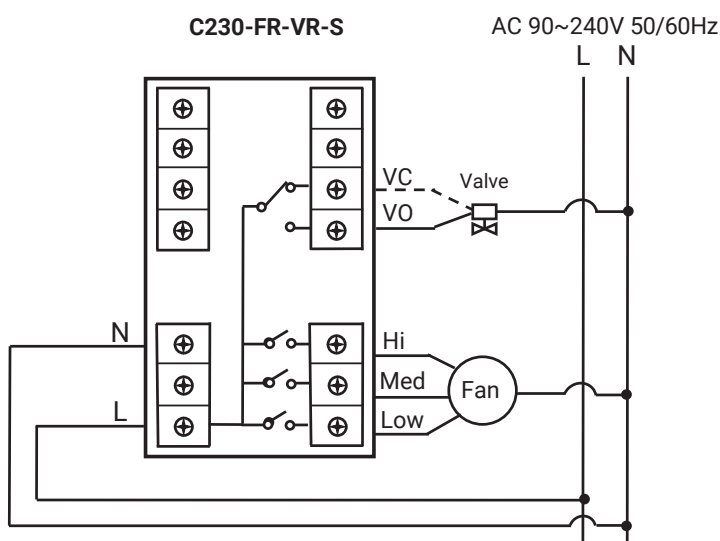

Parameter Setting

Parameter ID	Parameter Name	Default Value	Function Description
1	Key Lock Range	0	00: No lock
			01: Lock power key only
			02: Lock temperature adjustment, no temperature settings only
			04: Lock fan speed key, no fan speed adjustment only
			08: Lock mode setting, no mode adjustment only
4	Temperature Display Correction / Offset	0	Range: -5°C to 5°C, step: 0.5°C
5	Power Restoration Setting	2	00: Device off when power is restored
			01: Device on when power is restored
			02: Maintain original ON/OFF status when power is restored
6	Low-Temperature Protection	0	00: Disable low-temperature protection
			01: Enable low-temperature protection
7	Low-Temperature Protection Threshold	5	Range: 0°C to 17°C, step: 0.5°C
8	Clock and Timer Settings	0	00: No timer (no option)
11	Main Display Content	0	00: Indoor temperature
			01: Setpoint temperature
12	Maximum Setpoint Temperature	35	Range: 2°C to 90°C, step: 0.5°C
13	Minimum Setpoint Temperature	5	Range: 0°C to 88°C, step: 0.5°C
16	Differential Setting	1	Range: 1°C to 5°C, step: 0.5°C
29	High-Temperature Alarm Threshold	55	Range: 35°C to 90°C, step: 0.5°C
02U	Cooling/Heating Mode Setting	2	00: Heating only
			01: Cooling only
			02: Cooling/Heating (manual changeover)
06U	DA / DB	0	00: DA: electric valve closed, fan continues to run.
			01: DB: electric valve closed, fan is stopped.
07U	Ventilation Mode	1	00: Disabled
			01: Enabled
08U	Anti-cold Air Delay	0	Range: 0 to 300 seconds, step: 10 seconds
10U	Number of Fan Speed Available	2	00: Single-speed fan
			02: Three-speed fan
01o	Software Version	--	Displays current software version
02o	Restore Default Parameters	0	00: Retain user-defined parameters
			01: Restore factory parameters


Basic operation

Mode	Press "M" to change between cooling, heating, and ventilation modes.
Fan speed	Low  Med  High  Auto 
Power restoration setting	Last status will resume after power failure or switch off.
Temperature offset	In powered-off state, press and hold "A" up and "V" down keys for 5 seconds, range: -5°C to 5°C.
Keyboard unlock	Press "M" and "V" down keys for 5 seconds.
Sleep mode	Press "M" key for 3 seconds.
View parameters	With the device powered off, press and hold "U" + "V" down keys for 5 seconds.
Set parameters	In the parameter settings interface, press "M" or "⌘" keys to switch between parameters. Use "A" up or "V" down keys to adjust the parameter settings. The settings will be automatically confirmed after 6 seconds of inactivity, or you can press "U" key to save immediately. <i>Note: After confirming, keep the device powered on for at least 30 seconds to save the parameters to memory.</i>

Specifications

Terminal sizing	2 x 1.5 mm ² or 1 x 2.5 mm ² conductors
Screw terminals maximum torque	0.44 Nm
Mode of operation	Type 1 (according to EN 60730-1)
Pollution degree	2 (according to EN 60730-1)
Protection class	II Double Insulation
Rated impulse voltage	4000V

Dimensions [mm]

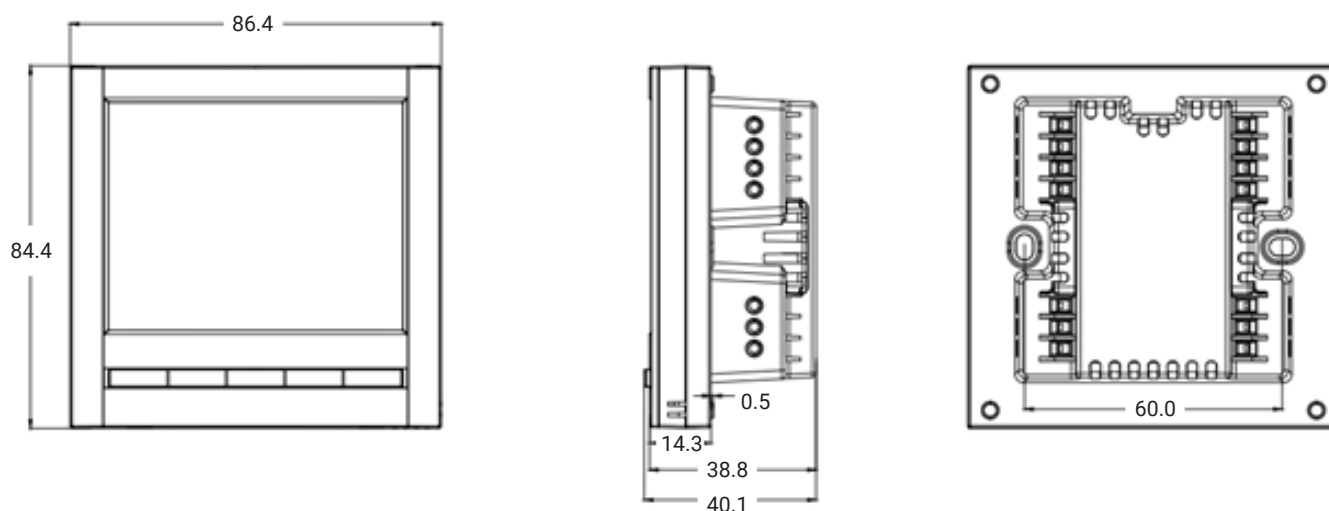

Safety notes


www.belimo.com/safety-notes


Read and understand instructions manual before using this equipment. Failure to follow operating instructions could result in death or serious injury.

For customer information according REACH regulation (EC) No 1907/2006 Article 33 on substances of very high concern (SVHC) follow the link or QR code



Importer to UK
BELIMO Automation UK Ltd, Shepperton Business Park, Govett
Avenue, SHEPPERTON, MIDDLESEX, TW17 8BA, ENGLAND

质量检验合格 Quality Inspection Passed

China RoHS - Product Declaration

Applicable to your product if it shows the China RoHS Symbol  on the Label

- Electric actuators
 - Rotary actuators
 - Globe valve actuators
 - Linear actuators
- Actuator-valve-combinations
 - Electric actuator + Linkage +
 - Globe valve or
 - Rotary valve
- Energy Valve
- EPIV
- Sensors
- Electrical accessory

Hazardous Substances Declaration										
Part Name ¹⁾	Pb (Lead)	Hg (Mercury)	Cd (Cadmium)	CrVI (Hexavalena Chromium)	PBB (Polybrominated biphenyls)	PBDE (Polybrominated diphenyl ethers)	DEHP (Diethyl hexyl phthalate)	BBP (Butyl benzyl phthalate)	DBP (Dibutyl phthalate)	DIBP (Diisobutyl phthalate)
Electronics	x	o	o	o	o	o	o	o	o	o
Motor ²⁾	x	o	o	o	o	o	o	o	o	o
Gearbox ²⁾	x	o	o	o	o	o	o	o	o	o
Accessory (metallic removable parts)	x	o	o	o	o	o	o	o	o	o
Valve, Flow unit ³⁾	x	o	o	o	o	o	o	o	o	o

¹⁾ Note that some of the listed parts may not be part of the enclosed product.
²⁾ Actuators only
³⁾ For actuator-valve-combinations, EPIV and Energy Valve only
 This table is prepared in accordance with the provisions of SJ/T 11364.
 o: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.
 x: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.