


General

This additional document describes the settings for the 6-way PI zone valve by using the ZTH EU service tool. The basic functions and more applications are described in the official ZTH EU documentation.

Functions for 6-way PIQCV

Menu tree The following menu tree shows the possible settings and values of the 6-way PI zone valve

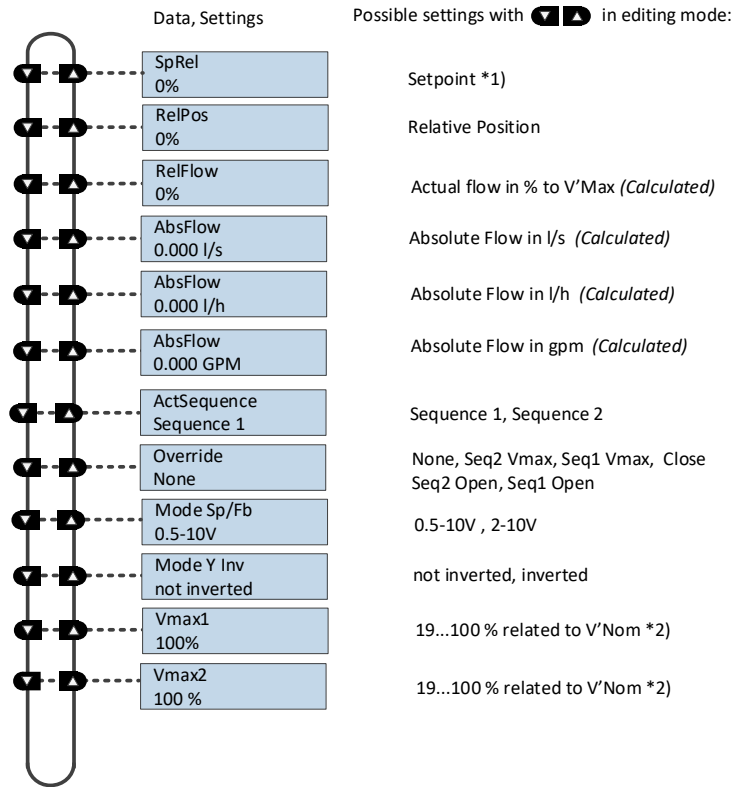

*1) Setpoint for actuator between Vmax1 (Register No. 106) and Vmax2 (No. 107)

Setpoint 0...33% refers to range Vmax1...0 l/h i.e. Setpoint 0% = Vmax1

Setpoint 67...100% refers to 0 l/h...Vmax2 i.e. Setpoint 100% = Vmax2

*2) Minimum V' max values may vary, related to Device type

C615QP-B+BAC	40	19
C615QP-D+BAC	100	23
C615QP-F+BAC	190	19
C620QPT-G+BAC	600	28