


General

This additional document describes the settings for the electronic 6-way CCV EPIV by using the ZTH EU service tool. The basic functions and more applications are described in the official ZTH EU documentation.

Functions for Electr. 6-way CCV EPIV

Menu tree The following menu tree shows the possible settings and values of the Electr. 6-way CCV EPIV

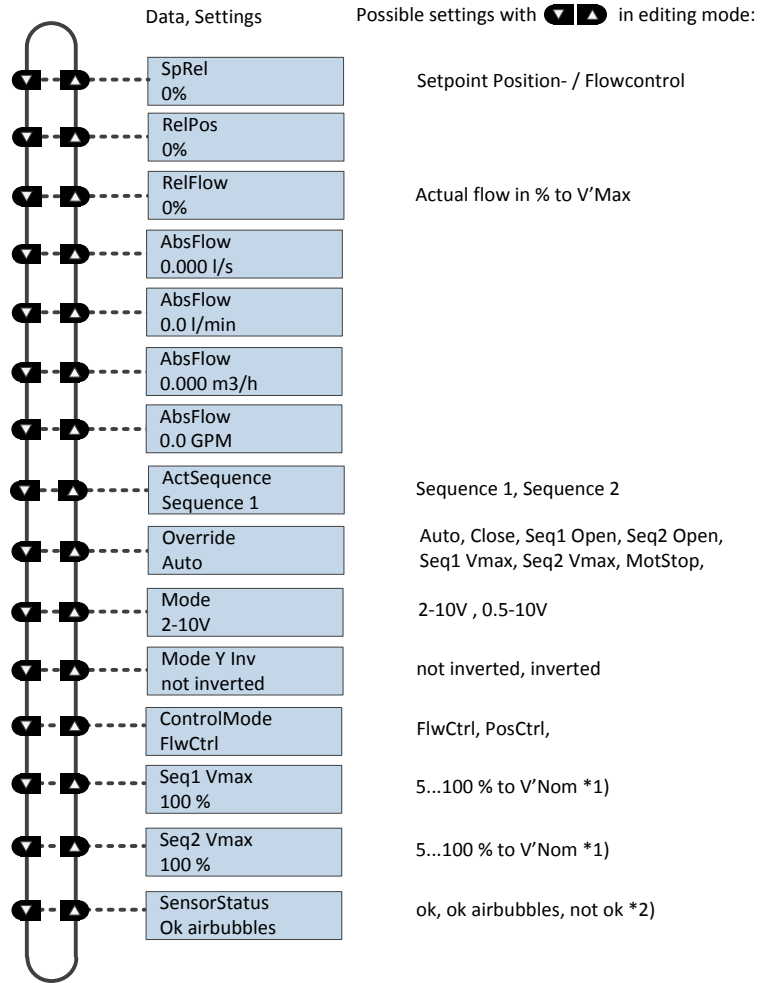

*1) Compliance with the maximum absolute values is in the responsibility of the operator. The product-specific limits must be adhered to (see data sheet)

*2) ok : Flow sensor is working properly
 ok airbubbles : Flow sensor is working properly , Airbubbles in the system
 not ok: Sensor error