

Configurable damper actuator for adjusting dampers in technical building installations

- Air damper size up to approx. 2 m²
- Torque motor 10 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V variable
- Position feedback 2...10 V variable



Technical data		
Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	3.5 W
	Power consumption in rest position	1.3 W
	Power consumption for wire sizing	6 VA
	Connection supply / control	Cable 1 m, 4x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Functional data	Torque motor	10 Nm
	Torque variable	25%, 50%, 75% reduced
	Operating range Y	210 V
	Input impedance	100 kΩ
	Operating range Y variable	Start point 0.530 V
		End point 2.532 V
	Operating modes optional	Open/close 3-point (AC only)
Y Y		Modulating (DC 032 V)
	Position feedback U	210 V
•	Position feedback U note	Max. 0.5 mA
	Position feedback U variable	Start point 0.58 V
		End point 2.510 V
	Position accuracy	±5%
	Direction of motion motor	selectable with switch 0/1
	Direction of motion note	Y = 0 V: At switch position 0 (ccw rotation) /
	Direction of motion variable	1 (cw rotation)
	Manual override	electronically reversible with push-button, can be locked
		Max. 95°
	Angle of rotation Angle of rotation note	can be limited on both sides with adjustable
		mechanical end stops
	Running time motor	150 s / 90°
	Running time motor variable	43173 s
	Adaptation setting range	manual
	Adaptation setting range variable	No action Adaptation when switched on Adaptation after pushing the manual override button



Technical data Functional data Override control MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50% Override control variable MAX = (MIN + 32%)...100%MIN = 0%...(MAX - 32%)ZS = MIN...MAX 35 dB(A) Sound power level, motor Mechanical interface Universal shaft clamp 8...26.7 mm Position indication Mechanical, pluggable Safety data Protection class IEC/EN III, Safety Extra-Low Voltage (SELV) Power source UL Class 2 Supply Degree of protection IEC/EN IP54 NEMA 2 Degree of protection NEMA/UL UL Enclosure Type 2 **Enclosure EMC** CE according to 2014/30/EU Certification IEC/EN IEC/EN 60730-1 and IEC/EN 60730-2-14 **UL** Approval cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case Type of action Type 1 Rated impulse voltage supply / control 0.8 kV Pollution degree 3 Ambient humidity Max. 95% RH, non-condensing Ambient temperature -30...50°C [-22...122°F] Storage temperature -40...80°C [-40...176°F] Servicing maintenance-free Weight Weight 0.82 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers
 concerning the cross-section and the design, as well as the installation situation and the
 ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.



Product features

Operating mode

The actuator is connected with a standard control signal of 0...10 V and drives to the position defined by the control signal. Measuring voltage U serves for the electrical display of the damper position 0...100% and as control signal for other actuators.

Parametrisable actuators

The factory settings cover the most common applications. Single parameters can be modified with the Belimo service tools MFT-P or ZTH EU.

Simple direct mounting

Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti-rotation device to prevent the actuator from rotating.

Manual override

Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Home position

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out a synchronisation. The synchronisation is in the home position (0%).

The actuator then moves into the position defined by the control signal.



Description

Adaptation and synchronisation

Electrical accessories

An adaptation can be triggered manually by pressing the "Adaptation" button or with the PCTool. Both mechanical end stops are detected during the adaptation (entire setting range).

Automatic synchronisation after pressing the manual override button is configured. The synchronisation is in the home position (0%).

The actuator then moves into the position defined by the control signal.

A range of settings can be adapted using the PC-Tool (see MFT-P documentation)

Accessories

	Auxiliary switch 1x SPDT add-on	S1A
	Auxiliary switch 2x SPDT add-on	S2A
	Feedback potentiometer 140 Ω add-on	P140A
	Feedback potentiometer 1 $k\Omega$ add-on	P1000A
	Feedback potentiometer 10 kΩ add-on	P10000A
	Signal converter voltage/current 100 kΩ 420 mA, Supply AC/DC 24 V	Z-UIC
	Positioner for wall mounting	SGA24
	Positioner for built-in mounting	SGE24
	Positioner for front-panel mounting	SGF24
	Positioner for wall mounting	CRP24-B1
Mechanical accessories	Description	Туре
	Actuator arm for standard shaft clamp (one-sided)	AH-25
	Shaft extension 240 mm ø20 mm for damper shaft ø822.7 mm	AV8-25
	Ball joint suitable for damper crank arm KH8	KG8
	Ball joint suitable for damper crank arm KH8 / KH10	KG10A
	Damper crank arm Slot width 8.2 mm, clamping range ø1018 mm	KH8
	Shaft clamp one-sided, clamping range ø826 mm with insert,	K-ENMA
	Multipack 20 pcs.	
	Shaft clamp one-sided, clamping range ø826 mm, Multipack 20 pcs.	K-ENSA
	Shaft clamp reversible, clamping range ø820 mm	K-NA
	Form fit insert 8x8 mm, Multipack 20 pcs.	ZF8-NMA
	Form fit insert 10x10 mm, Multipack 20 pcs.	ZF10-NSA
	Form the misere Tox To min, Multipack 20 pcs.	ZF10-N3A

Type



Accessories

	Description	Туре
	Form fit insert 12x12 mm, Multipack 20 pcs.	ZF12-NSA
	Form fit insert 15x15 mm, Multipack 20 pcs.	ZF15-NSA
	Form fit insert 16x16 mm, Multipack 20 pcs.	ZF16-NSA
	Mounting kit for linkage operation for flat installation	ZG-NMA
	Anti-rotation mechanism 180 mm, Multipack 20 pcs.	Z-ARS180
	Baseplate extension for NMA to NM	Z-NMA
	Position indicator, Multipack 20 pcs.	Z-PI
;	Description	Туре
	Service tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance devices	ZTH EU
	Belimo PC-Tool, Software for adjustments and diagnostics	MFT-P
	Adapter for Service-Tool ZTH	MFT-C
	Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin for connection to service socket	ZK1-GEN
	Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal	ZK2-GEN

Electrical installation





Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

Wiring diagrams

AC/DC 24 V, modulating

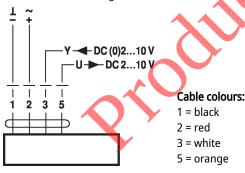

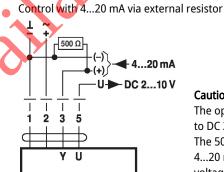

Caution:


The operating range must be set to DC 2...10 V.

The 500 Ω resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V


Functions

Functions with basic values (conventional mode)

Override control with AC 24 V with relay contacts

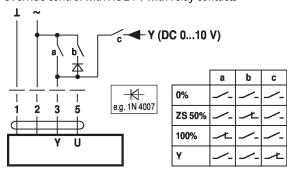

Override control with AC 24 V with rotary switch

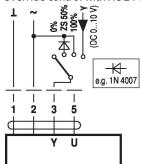






Functions with basic values (conventional mode)

Control remotely 0...100% with positioner SG..


Minimum limit with positioner SG..

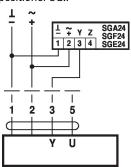

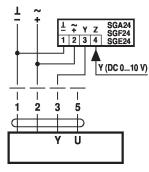


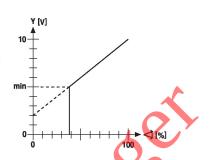

Primary/secondary operation (position-dependent)

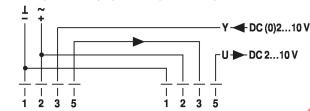

Control with 4...20 mA via external resistor

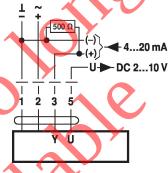

Caution:

The operating range must be set to DC 2...10 V.


The 500 Ω resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V

Functional check

Procedure


and 3:

- 1. Connect 24 V to connections 1 and 2
- 2. Disconnect connection 3:with direction of rotation 0:Actuator rotates to the left
- with direction of rotation 1:
 Actuator rotates to the right
 Short-circuit connections 2
- Actuator runs in opposite direction

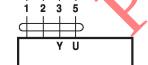


Functions with specific parameters (parametrisation necessary)

Override control and limiting with AC 24 V with relay contacts

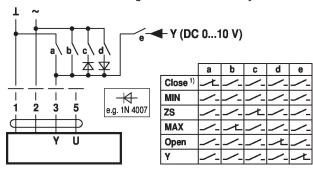

Override control and limiting with AC 24 V with rotary switch

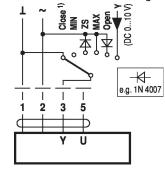


1) **Caution:** This function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.




Functions


Functions with specific parameters (parametrisation necessary)

Control open/close

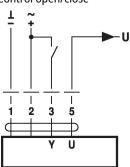

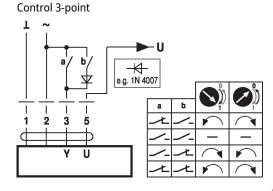

Operating controls and indicators

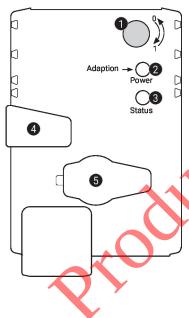

1 Direction of rotation switch

Switch over: Direction of rotation changes

2 Push-button and LED display green

Off: No power supply or malfunction

On: In operation

Press button: Triggers angle of rotation adaptation, followed by standard mode

3 Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Press button: No function

4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible
Release Gear train engages, synchronisation starts, followed by standard

button: mode

Service plug

For connecting parametrisation and service tools

Check power supply connection

2 Off and 3 On Possible wiring error in power supply




Service

Tools connection

The actuator can be parametrised by ZTH EU via the service socket.


For an extended parametrisation the PC tool can be connected.

Connection ZTH EU / PC-Tool

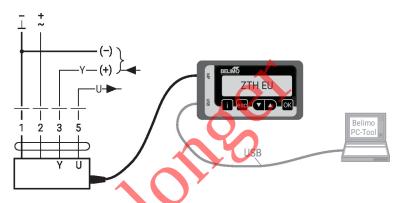


Dimensions

Spindle length

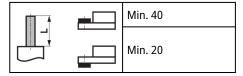

Clamping range

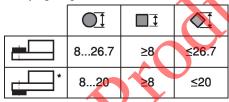

*Option: Shaft clamp mounted below (accessories K-NA needed)

