

# PI Zone Valve, 2-way, Internal thread

- For closed water systems
- For modulating control of air-handling and heating systems on the water side
- Snap-assembly of the actuator
- PT = Version with measuring ports (P/T ports)



Picture may differ from product

Type overview								
Туре	DN	Rp ["]	V'nom [l/s]	V'nom [l/h]	V'nom [m³/h]			Sv min.
C220QPT-G	20	3/4	0.583	2100	2.1	25	3.2	100

PT: Version with measuring ports (P/T ports)

# **Technical data**

Functional data	Fluid	Water, water with glycol up to max. 50% vol.				
	Fluid temperature	-20120°C [-4248°F]				
	Fluid temperature note	with actuator 290°C				
	Differential pressure	16350 kPa				
	Close-off pressure ∆ps	1400 kPa				
	Differential pressure Δpmax	350 kPa				
	Flow characteristic	equal percentage (VDI/VDE 2173), optimised in the opening range				
	Pressure stability	±5% with a pressure value of 35350 kPa ±10% with a pressure value of 1635 kPa				
	Leakage rate	air-bubble tight, leakage rate A (EN 12266-1)				
	Flow setting	See installation instruction				
	Angle of rotation	90°				
	Angle of rotation note	Operating range 1590°				
	Pipe connection	Internal thread according to ISO 7-1				
	Installation orientation	upright to horizontal (in relation to the spindle)				
	Servicing	maintenance-free				
Materials	Valve body	Brass				
	Closing element	Stainless steel				
	Spindle	Stainless steel				
	Spindle seal	EPDM O-ring				
	Seat	PTFE, O-ring EPDM				
	Diaphragm	EPDM				
Terms	Abbreviations	V'nom = nominal flow with valve completely opened V'max = maximum flow, set by the angle of rotation limitation on the actuator				



### Safety notes



- The valve has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The valve does not contain any parts that can be replaced or repaired by the user.
- The valve may not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- When determining the flow rate characteristic of controlled devices, the recognised directives must be observed.

#### **Product features**

# Operating mode

The ball valve is adjusted by a rotary actuator. The actuator is controlled by a commercially available modulating or 3-point control system and moves the ball of the valve – the throttling device – to the position dictated by the control signal. Open the characterised control valve counterclockwise and close it clockwise.

#### Flow characteristic

Equal percentage flow control is ensured by the special design of the ball.

#### Constant flow volume

With a differential pressure of 16...350 kPa, a constant flow volume is achieved thanks to the integrated differential pressure controller. Independently of the differential pressure through the valve, a valve authority of 1 is achieved. Even with pressure variations and in the partial load range, the flow rate remains constant with each respective opening position (angle of rotation) and ensures a steady control.

# Measuring ports (P/T ports)

The C2..QPT-.. type valves have two measurement ports. The total drop in pressure across the valve can be determined using the measurement points at the valve inlet (P1) and outlet (P3).

The measurement ports can be used to easily establish whether the actual differential pressure across the valve is within the admissible range of 16...350 kPa. If it is, the valve operates independently of pressure and the correct flow rate is automatically ensured by the valve according to the setting table.

The differential pressure measurement can also be used to optimise the pump setting. This involves reducing the pump head until only the minimum differential pressure required (16 kPa) is still present across the valve at the point of lowest pressure (the furthest away from the pump in hydronic terms).


#### **Accessories**

Mechanical accessories	Description	Туре	
	Spindle extension CQ	ZCQ-E	
	Flow limiter PIQCV	ZCQ-FL	
	Pipe connector for ball valve with internal thread DN 20 Rp 3/4"	ZR2320	

# **Installation notes**

### Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the spindle pointing downwards.

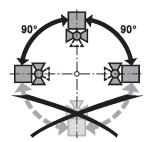

Installation in return

Installation in the return is recommended.



# **Installation notes**

# Water quality requirements

The water quality requirements specified in VDI 2035 must be adhered to.

Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

#### Servicing


Ball valves and rotary actuators are maintenance-free.

Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.

# Flow direction

The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the ball valve could become damaged. Please ensure that the ball is in the correct position (marking on the spindle).

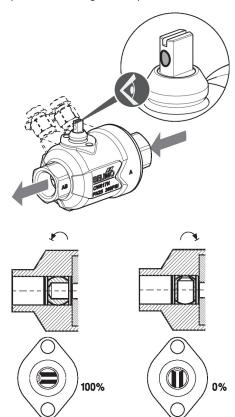




# **Installation notes**

# Flow setting

The angle of rotation of the CQ.. actuator can be changed by end stop clip in 2.5° increments. This is used to set the V'max-value (maximum flow rate of the valve).

Remove end stop clip and place at desired position.


After every change of the flow setting by means of end stop clip, an adaptation must be triggered on the modulating actuators.

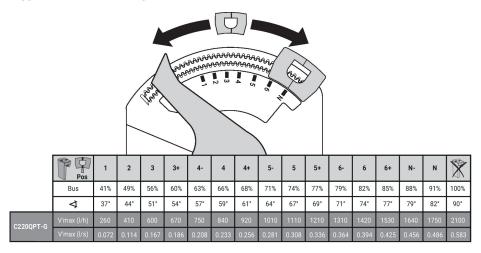




# **Dimensions**

# **Dimensional drawings**

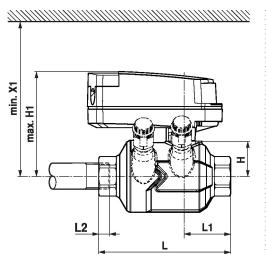

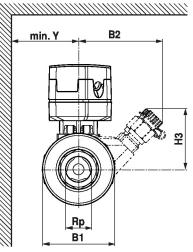

H1/X1: without spindle extension CQ L2: Maximum screwing depth.

Туре	DN	Rp	L	L1	L2	B1	B2	Н	H1	H3	X1	Υ	മ
		["]	[mm]	/ kg \									
C220QPT-G	20	3/4	118	42	17	79	66	38	88	52	137	55	1.6

# **Further documentation**

- Data sheets for actuators CQ..
- Installation instructions for zone valves and actuators
- General notes for project planning