

## Rotary actuator for zone valves

- Torque motor 1 Nm
- Nominal voltage AC 100...240 V
- Control Open/close, 3-point
- Snap-assembly of the actuator
- Flow setting variable
- only for DN 20 Zone valves C..20Q..., C..20QFL...
- Running time motor 15 s



## Technical data

<b>Electrical data</b>	Nominal voltage	AC 100...240 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 85...265 V
	Power consumption in operation	2 W
	Power consumption in rest position	0.7 W
	Power consumption for wire sizing	3.5 VA
	Connection supply / control	Cable 1 m, 3 x 0.75 mm <sup>2</sup>
	Parallel operation	Yes (note the performance data)
<b>Functional data</b>	Torque motor	1 Nm
	Manual override	with actuator (clicked out)
	Running time motor	15 s / 90°
	Sound power level, motor	55 dB(A)
	Position indication	Yes
	Flow setting	see product features
<b>Safety data</b>	Protection class IEC/EN	II, reinforced insulation
	Degree of protection IEC/EN	IP40
	EMC	CE according to 2014/30/EU
	Low voltage directive	CE according to 2014/35/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	Type of action	Type 1
	Rated impulse voltage supply / control	2.5 kV
	Pollution degree	2
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	5...40°C [41...104°F]
<b>Weight</b>	Storage temperature	-40...80°C [-40...176°F]
	Servicing	maintenance-free
<b>Weight</b>		0.25 kg


## Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insulation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

## Product features

<b>Simple direct mounting</b>	Tool-free snap assembly. The actuator can be plugged on the valve by hand (Caution! Just vertical movements). Pins must match the holes on the flange. The mounting orientation in relation to the valve can be selected in 180° increments. (Possible two times)
<b>Manual override</b>	Click out the actuator and rotate the valve spindle with the help of the actuator.
<b>Adjustable angle of rotation</b>	The angle of rotation of the actuator can be changed by clip in 2.5° increments. This is used to set the maximum flow rate of the valve.
<b>High functional reliability</b>	The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.
<b>Flow setting</b>	Adjustable kv-values (C2..Q-.., C4..Q-..) are given in the respective zone valve data sheets. 2-way valve: Remove end stop clip and place at desired position. 3-way valve: Remove end stop clip (change-over application).

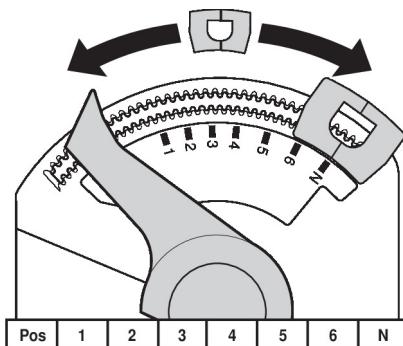

## Accessories

Mechanical accessories	Description	Type
Spindle extension CQ		ZCQ-E
Housing cover CQ, Colour: white (RAL 9010)		ZCQ-W
End stop clip, Multipack 5 pcs.		ZCQ-C
End stop clip, Multipack 20 pcs.		Z-ESCM

## Electrical installation

**Caution: Power supply voltage!**


Parallel connection of other actuators possible. Observe the performance data.

**Wire colours:**


- 1 = blue
- 2 = brown
- 3 = white

**Wiring diagrams**


AC 230 V, open/close

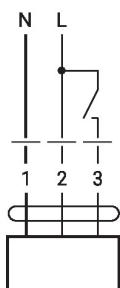

AC 230 V, 3-point

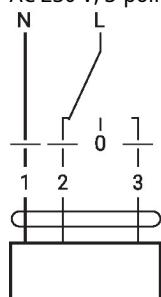

1	2	3	

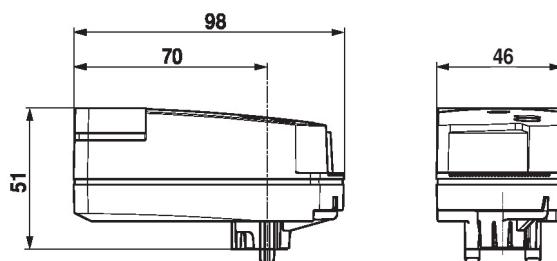**Dimensions****Further documentation**

- The complete product range for water applications
- Data sheet for zone valves
- Installation instructions for zone valves and actuators
- General notes for project planning