

Belimo Assistant App Operating Instructions

Download the Belimo Assistant App on Google Play.

This is a free app. In order to download, a Google account is required. If you do not have a Google account, visit accounts.google.com for set up.

In the Google Play Store (play.google.com), search "Belimo Assistant".
Click on the icon shown to the right and click install.



Belimo Assistant
BELIMO Automation AG
***** FREE



Belimo Assistant

BELIMO Automation AG Tools
Everyone

Add to Wishlist

Install


**Belimo Assistant App
Icon on Google Play**

Using the Belimo Assistant App



1. Click on the Belimo Assistant App icon on your Android phone




2. Once the app is opened, the **Scan device** screen will display.

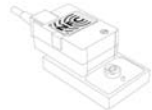

3. Place the phone on the actuator over the NFC logo

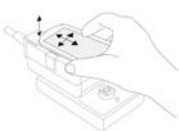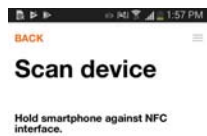

4. An audible tone will sound and vibration will start. The screen will change to show that the app is scanning.

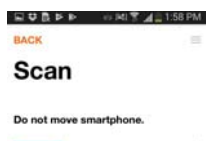


5. When scan is complete, an **Overview** screen will appear with the current settings.




Troubleshooting

A **Scanning error** message will appear if the phone is removed before the scan is complete.

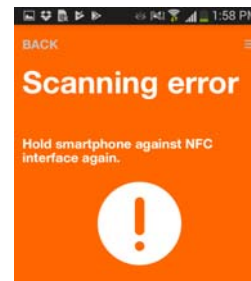

If scanning multiple devices too quickly, or in succession, a **Wrong device** error screen will show.

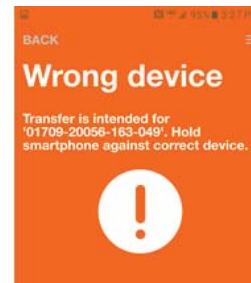

If the actuator was previously powered for less than 20 seconds, a **Transmission error** will appear. Power up the actuator to clear this message.




Belimo Assistant App Operating Instructions

Making Changes with the Belimo Assistant App

Select the **menu** button in the top right corner.



Then select **Settings**

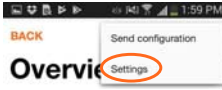



then **Expert Mode**




1. To make Configuration changes, click the gear icon at the bottom of the screen.





2. From the **Configuration** screen, select the specific category in which you would like to make changes (i.e. Setpoint, Application, etc.).

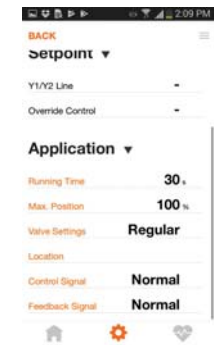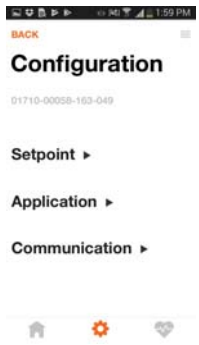

3. To make individual changes, select the field you wish to change and type in changes while field is highlighted, or use the provided drop down menus.

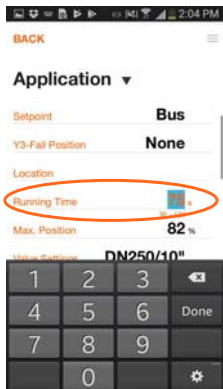

4. Once a change has been made, the **Write** button will highlight. Press the Write button and a confirmation screen will appear.

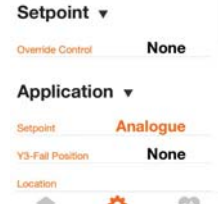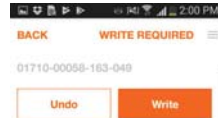

To Check Diagnostics

Press the heart icon at the bottom of the screen.



The **Diagnosis** screen will provide information on direction changes, starts, mechanical overloads, and voltage failures.

