Characterised control valve with thermal energy meter, sensor-operated flow or power control, power and energy monitoring function, 2-way, internal and external thread, PN 25

- Nominal voltage AC/DC 24 V
- Control modulating, communicative, hybrid
- · For closed water systems
- For modulating control of air-handling and heating systems on the water side
- Ethernet 10/100 Mbit/s, TCP/IP, integrated web server
- Communication via BACnet, Modbus, Belimo MP-Bus or conventional control
- PoE (Power over Ethernet) Power supply possible
- Conversion of sensor signals
- Glycol monitoring
- Power control, flow control, position control and differential pressure control



Picture may differ from product



Type Overview PΝ Type DN Rр G V'nom V'nom V'nom Kvs theor. ["] ["] [l/s] [l/min] [m³/h][m³/h] EV050R2+KBAC-N 50 2 1/2 6.3 378 22.68 30.4 25

Kvs theor.: theoretical Kvs value for pressure drop calculation


Structure

Components

The Belimo Energy Valve consists of a characterised control valve, an actuator and a thermal energy meter with a logic and a sensor module.

The logic module provides the power supply, the communication interface and the NFC connection of the energy meter. All relevant data are measured and recorded in the sensor module.

This modular design of the energy meter means that the logic module can remain in the system if the sensor module is replaced.

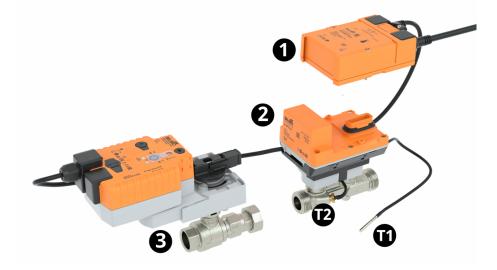

External temperature sensor T1 Integrated temperature sensor T2

Logic module 1

Sensor module 2

Characterised control valve with actuator 3

Technical data

Electrical data

Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	15 W
Power consumption in rest position	6.5 W



EV050R2+KBAC-N



Technical data

Electrical data	Power consumption for wire sizing	26 VA
Data bus communication Functional data	Connection supply / control	Cable 1 m, 6x 0.75 mm²
	Connection Ethernet	RJ45 socket
	Power over Ethernet PoE	DC 3757 V
		11 W (PD13W)
		IEEE 802.3af/at, Type 1, Class 3
	Conductors, cables	Power supply AC/DC 24 V: cable length <100 m, no shielding or twisting required
		Power supply PoE: shielded cables
		recommended
	Cable length	1 m
Data bus communication	Communicative control	DACnot/ID DACnot MC/TD
Data bus communication	Communicative control	BACnet/IP, BACnet MS/TP Modbus TCP, Modbus RTU
		MP-Bus
		Cloud
	Number of nodes	BACnet / Modbus see interface description
		MP-Bus max. 8
Functional data	Operating range Y	210 V
	Operating range Y variable	0.510 V
	Input impedance	100 kΩ
	Position feedback U	210 V
Data bus communication	Position feedback U note	Max. 1 mA
	Position feedback U variable	010 V 0.510 V
	Setting fail-safe position	NC/NO or adjustable 0100% (POP rotary
	5	knob)
	Running time fail-safe	35 s / 90°
	Sound power level motor	45 dB(A) dB(A)
	Sound power level, fail-safe	61 dB(A)
	V'max adjustable	25100% of V'nom
	Control accuracy	±5% (of 25100% V'nom)
	Control accuracy note	±10% (of 25100% V'nom) @ Glycol 060% vol.
	Min. controllable flow	1% of V'nom
	Configuration	via NFC, Belimo Assistant 2
	3	via integrated web server
	Fluid	Water, water with glycol up to max. 60% vol.
	Fluid temperature	-10120°C [14248°F]
	Fluid temperature note	At a fluid temperature of -102°C, a stem
		heater or a valve neck extension is
		recommended.
		The allowed fluid temperature can be limited, depending on the type of actuator. Limitations
		can be found in the respective data sheets of
		the actuators.
	Close-off pressure Δps	1400 kPa
	Differential pressure Δpmax	350 kPa
	Differential pressure note	200 kPa for low-noise operation
	Flow characteristic	equal percentage (VDI/VDE 2173), optimised in the opening range
	Flow characteristic note	switchable to linear (VDI/VDE 2173)
	Leakage rate	air-bubble tight, leakage rate A (EN 12266-1)
	Pipe connection	Internal and external thread
	<u> </u>	



Technical data						
Functional data	Installation orientation	upright to horizontal (in relation to the spindle)				
	Servicing	maintenance-free				
	Manual override	with push-button				
Measuring data	Measured values	Flow Fluid temperature supply Fluid temperature return				
	Temperature sensor	Pt1000 - EN 60751, 2-wire technology, inseparably connected Cable length external sensor T1: 3 m T2 integrated in flow sensor				
Temperature measurement	Measuring accuracy absolute temperature	Temperature probe (probe only – individually compensated): \pm (0.1 + 0.0017 T) °C (corresponds to Pt1000 EN60751 Class AA) Calculator + temperature probe: \pm (0.15 + 0.002 T) °C				
	Measuring accuracy differential temperature	, ,				
Flow measurement	Measuring principle	Ultrasonic flow measurement				
	Measuring accuracy flow	±2%, according to class 2 EN 1434, glycol 0% vol.				
	Measuring accuracy flow note	@ 15120°C Inlet section ≥0x DN (EN 1434-4:2022) ±5% (of 20100% V'nom) @ glycol 060% vol.				
	Min. flow measurement	0.2% of V'nom				
Glycol monitoring	Measurement display glycol	060%				
C.yco:og	Measuring accuracy glycol monitoring	±4%				
Safety data	Protection class IEC/EN Degree of protection IEC/EN	III, Protective Extra-Low Voltage (PELV) IP54 Logic module: IP54 (with grommet A-22PEM-A04) Sensor module: IP65				
	Measuring Instruments Directive	CE according to 2014/32/EU				
	Pressure equipment directive	CE according to 2014/68/EU				
	EMC	CE according to 2014/30/EU				
	Certification IEC/EN	IEC/EN 60730-1:11 and IEC/EN 60730-2-15:10				
	Quality Standard	ISO 9001				
	Type of action	Type 1.AA				
	Rated impulse voltage supply / control	0.8 kV				
	Pollution degree	May 05% PM, and and density				
	Ambient humidity	Max. 95% RH, non-condensing				
	Ambient temperature Storage temperature	-3050°C [-22122°F] -4080°C [-40176°F]				
Materials	Valve body	Brass				
	Body finish	nickel-plated				
	Flow measuring pipe	Nickel-plated brass body Stainless steel				
	Closing element Spindle	Stainless steel Stainless steel				
	Spindle seal	EPDM O-ring				

Technical data

Materials Immersion sleeve Stainless steel

Terms Abbreviations POP = Power off position / fail-safe position

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Operating mode

The HVAC performance device is comprised of four components: characterised control valve (CCV), measuring pipe with flow sensor, temperature sensors and the actuator itself. The adjusted maximum flow (V'max) is assigned to the maximum control signal DDC (typically 10 V / 100%). Alternatively, the control signal DDC can be assigned to the valve opening angle or to the power required on the heat exchanger (see power control). The HVAC performance device can be controlled via communicative or analogue signals. The fluid is detected by the sensor in the measuring pipe and is applied as the flow value. The measured value is balanced with the setpoint. The actuator corrects the deviation by changing the valve position. The angle of rotation α varies according to the differential pressure through the control element (see flow curves).

With the supply voltage the integrated capacitors will be charged.

Interrupting the supply voltage causes the valve to be moved to the selected fail-safe position by means of stored electrical energy.

Calibration certificate

A calibration certificate is available in the Belimo Cloud for each thermal energy meter. If required, this can be downloaded as a PDF with Belimo Assistant 2 or via the Belimo Cloud frontend.

Power calculation

The thermal energy meter calculates the current thermal power based on the current flow rate and the measured temperature difference.

Energy consumption

The energy consumption data can be read out as follows:

- Bus
- Cloud API
- Belimo Cloud Account of the device owner
- Belimo Assistant 2
- Integrated web server

PoE (Power over Ethernet)

If necessary, the Energy Valve can be supplied with power via the Ethernet cable. This function can be enabled via Belimo Assistant 2.

DC 24 V (max. 8 W) is available at wires 1 and 2 for power supply of external devices (e.g. actuator or active sensor).

Caution: PoE may only be enabled if an external device is connected to wires 1 and 2 or if wires 1 and 2 are insulated!


Spare parts

Sensor module of the thermal energy meter consisting of:

- 1 x sensor module including integrated temperature sensor T2 and external temperature sensor T1 $\,$




Flow rate curves

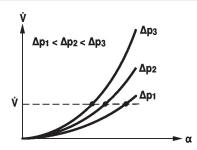

Pre-charging time (start up)

The capacitor actuators require a pre-charging time. This time is used for charging the capacitors up to a usable voltage level. This ensures that, in the event of a power failure, the actuator can move at any time from its current position into the preset fail-safe position. The duration of the pre-charging time depends mainly on how long the power was interrupted.

Typical pre-charging time

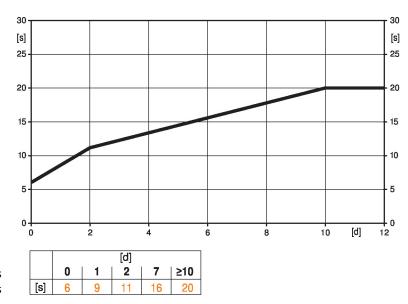

[d] = Power failure in days [s] = Pre-charging time in seconds

Delivery condition (capacitors)

The actuator is completely discharged after delivery from the factory, which is why the actuator requires approximately 20 s pre-charging time before initial commissioning in order to bring the capacitors up to the required voltage level.


Setting fail-safe position

The rotary knob fail-safe position can be used to adjust the desired fail-safe position 0...100% in 10% increments. The rotary knob always refers to the adapted angle of rotation range. In the event of a power failure, the actuator will move into the selected fail-safe position.

Transmission behaviour HE

Heat exchanger transmission behaviour

Depending on the construction, temperature spread, fluid characteristics and hydronic circuit, the power Q is not proportional to the water volumetric flow V' (Curve 1). With the classical type of temperature control, an attempt is made to maintain the control signal Y proportional to the power Q (Curve 2). This is achieved by means of an equal-percentage flow characteristic (Curve 3).

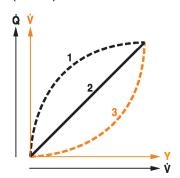



Power control

Alternatively, the control signal DDC can be assigned to the output power required at the heat exchanger.

Depending on the water temperature and air conditions, the Energy Valve ensures the amount of water V' required to achieve the desired power.

Maximum controllable power on heat exchanger in power control mode:

DN 15	90 kW
DN 20	150 kW
DN 25	210 kW
DN 32	350 kW
DN 40	590 kW
DN 50	880 kW

Control characteristics


The specially configured control parameters in connection with the precise velocity sensor ensure a stable quality of control. They are, however, not suitable for rapid control processes, i.e. for domestic water control.

Power control

Q'nom is the maximum possible power output on the heat exchanger.

Q'max is the maximum power output on the heat exchanger which has been set with the highest control signal DDC. Q'max can be set between 1% and 100% of Q'nom.


Q'min 0% (non-variable).

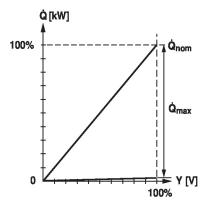

Flow control

V'nom is the maximum possible flow.

V'max is the maximum flow rate which has been set with the highest control signal DDC. V'max can be set between 25% and 100% of V'nom.

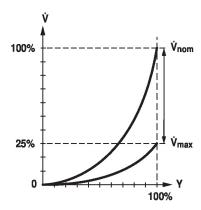



Position control

In this setting, the control signal is assigned to the opening angle of the valve (e.g. Y = 10 V α = 90°).

The result is a pressure-dependent operation similar to that of a conventional valve.

Running time of the motor in this mode is 90 s for 90° .




Differential pressure control

In addition to power control, flow control and position control, the Energy Valve can be used to control the differential pressure between two measuring points of a differential pressure sensor (not included).


The following differential pressure sensors can be used:

- Belimo differential pressure sensor 22WDP-11..
- Belimo differential pressure sensor 22PDP-18..

The specifications listed in the sensor data sheet must be observed.

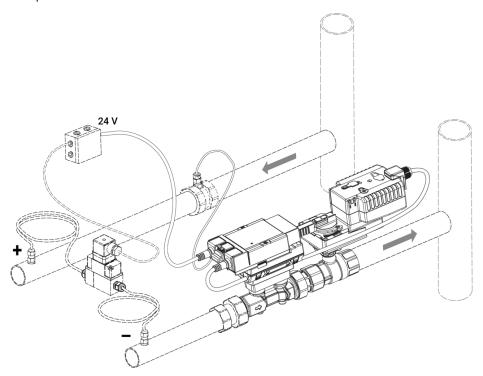

Energy Valve with accessories Differential pressure sensor 22WDP-11.. Pipe connector ZREV..F T-piece with thermowell A-22PE-A0..

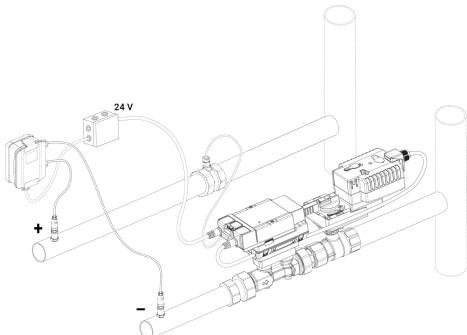

Energy Valve with accessories Differential pressure sensor 22PDP-18.. Pipe connector ZREV..F T-piece with thermowell A-22PE-A0..

In the operating mode differential pressure control, no external setpoint is given to the Energy Valve. The setpoint is set in the device. The setting is made via web server, Belimo Assistant 2, communicative interface (BACnet, Modbus, MP-Bus) or via the Belimo Cloud. The possible setting value depends on the selected differential pressure sensor and is between 10 and 400 kPa.

Further information on the differential pressure control mode can be found in the document "Differential pressure control with the Belimo Energy Valve™".



Creep flow suppression


Given the very low flow speed in the opening point, this can no longer be measured by the sensor within the required tolerance. This range is overridden electronically.

Opening valve

The valve remains closed until the flow required by the control signal DDC corresponds to 1% of V'nom. The control along the flow characteristic is active after this value has been exceeded.

Closing valve

The control along the flow characteristic is active up to the required flow rate of 1% of V'nom. Once the level falls below this value, the flow rate is maintained at 1% of V'nom. If the level falls below the flow rate of 0.5% of V'nom required by the control signal DDC, then the valve will close.

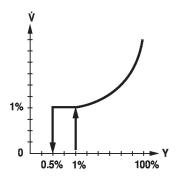

Configurable device

The factory settings cover the most common applications.

The configuration can be carried out through the integrated web server (RJ45 connection to the web browser) or by communicative means.

Additional information regarding the integrated web server can be found in the separate documentation.

Belimo Assistant 2 is required for configuration via Near Field Communication (NFC) and simplifies commissioning. Moreover, Belimo Assistant 2 provides a variety of diagnostic options.

Communication

The configuration can be carried out through the integrated web server (RJ45 connection to the web browser) or by communicative means.

Additional information regarding the integrated web server can be found in the separate documentation.

"Peer to Peer" connection

https://169.254.1.1

The Notebook must be set to "DHCP".


Make sure that only one network connection is active.

Standard IP address:

https://192.168.0.10 Static IP address

Password (read-only):

User name: «guest» Password: «guest»

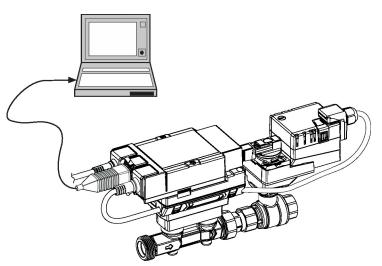

Control signal inversion

This can be inverted in cases of control with an analogue control signal DDC. The inversion causes the reversal of the standard behaviour, i.e. at a control signal DDC of 0%, regulation is to V'max or Q'max, and the valve is closed at a control signal DDC of 100%.



Hydronic balancing

Via the integrated web server, the maximum flow rate (equivalent to 100% requirement) can be adjusted on the device itself, simply and reliably, in a few steps. If the device is integrated in the management system, then the balancing can be handled directly by the management system.

Delta-T manager

If a heating or cooling coil is operated with a flow rate that is too high and thus with a differential temperature that is too low, this will not result in an increased power output.


Low differential temperatures result in heat generators or chillers providing energy at a lower efficiency. At the same time, too much water is circulated by the pumps, which unnecessarily increases energy consumption.

With the aid of the Energy Valve, it is easy to identify operation that deviates from the design case and to locate energy that is being used inefficiently.

The integrated delta T manager offers the user the possibility to define a delta T limit value. Falling below this value is automatically avoided by the Energy Valve by limiting the flow rate.

The delta T manager can be activated in the operating modes power control, flow control and position control. The delta T manager is not available in the differential pressure control operating mode.

Power output of the heating or cooling registers 1 Diff. temperature between supply and return 2 Loss zone (heating or cooling register saturation) 3 Adjustable minimum differential temperature

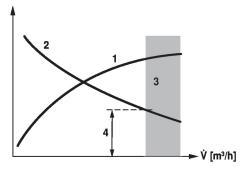

Combination analogue - communicative (hybrid mode)

With conventional control by means of an analogue control signal DDC, the integrated web server, BACnet, Modbus or MP-Bus can be used for the communicative position feedback.

Power and energy monitoring function

The HVAC performance device is equipped with two temperature sensors. A sensor (T2) is already installed at the thermal energy meter and the second sensor (T1) must be installed on-site on the other side of the water circuit. The two sensors are enclosed with the system already wired. The sensors are used to record the fluid temperature of the supply and return lines of the consumer (heating/cooling coil). As the water quantity is also known, thanks to the flow measurement integrated in the system, the power released from the consumer can be calculated. Furthermore, the heating/cooling energy is also determined automatically by means of the evaluation of the power over time.

The current data, e.g. temperatures, volumetric flow volumes, exchanger energy consumption etc. can be recorded and accessed at any time by means of web browsers or communication.

Data recording

The recorded data (integrated data recording for 13 months) can be used for the optimisation of the overall system and for the determination of the performance of the consumer (heating/cooling coil).

Download csv files through web browser.

Belimo Cloud

Additional services are available if the Energy Valve is connected to the Belimo Cloud: for instance, several devices may be managed via Internet. Also, Belimo experts may help analyse the delta-T behaviour or provide written reports about the Energy Valve performance. Under certain conditions, the product warranty according to the applicable Terms and Conditions of Sale may be prolonged. The "Terms of Use for Belimo Cloud Services" in their currently valid version apply to the use of Belimo Cloud services. Further details may be found under [www.belimo.com/ext-warranty]



Patented glycol compensation

Glycol changes the viscosity of the heat transfer fluid and as a result affects the measured volumetric flow. Without glycol compensation, volumetric flow measurements can show errors of as much as 30 percent. The patented automatic glycol compensation significantly reduces the degree of measurement error.

Selection of the fluid used:

- Water
- Propylene glycol
- Ethylene glycol
- Antifrogen L
- Antifrogen N
- DowCal 200
- DowCal 100

Determining the glycol concentration requires recurring temperature changes of min. 2 K within the flow sensor during operation. Installing the flow sensor in the temperature-variable part of the system is recommended to ensure these temperature changes.

Error readout with analogue feedback signal

If the sensor cannot measure the flow due to a sensor error, this is indicated by 0.3 V at the position feedback U. This is only the case if the analogue position feedback U is set to flow and the lower value of the signal range is 0.5 V or more.

Manual override

Manual control with push-button possible - temporary. The gear train is disengaged and the actuator decoupled for as long as the button is pressed.

High functional safety

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Parts included

Description	Туре
Grommet for RJ connection module with clamp	A-22PEM-A04
Thermowell Stainless steel, 50 mm, G 1/4", SW17	A-22PE-A07
Insulation shell for EPIV / Belimo Energy Valve™ DN 3250	Z-INSH32
Insulation shell not included in Asia Pacific	

Accessories

Replacement sensor modules	Description	Туре		
	Sensor module thermal energy meter DN 50	R-22PE-0UH		
Tools	Description	Туре		
	Service tool for wired and wireless setup, on-site operation and troubleshooting.	Belimo Assistant 2		
	LINK.10			
Gateways	Description	Туре		
	Converter M-Bus	G-22PEM-A01		
Mechanical accessories	Description	Туре		
	T-piece with thermowell DN 50	A-22PE-A06		
	Thermowell Stainless steel, 80 mm, G 1/2", SW27	A-22PE-A08		
	Valve neck extension for ball valve DN 1550	ZR-EXT-01		
	Pipe connector for ball valve with internal thread DN 50 Rp 2"	ZR2350		
	Pipe connector for EPIV / Energy valve with external thread DN 50 Rp 2", G 2 $1/2$ "	ZREV50F		



Electrical installation



Functions:

C1 = D- (wire 6)

C2 = D + (wire 7)

Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

The wiring of the line for BACnet MS/TP / Modbus RTU is to be carried out in accordance with applicable RS-485 regulations.

Modbus / BACnet: Supply and communication are not galvanically isolated. COM and ground of the devices must be connected to each other.

Sensor connection: An additional sensor can optionally be connected to the thermal energy meter. This can be a passive resistance sensor Pt1000, Ni1000, NTC10k (10k2), an active sensor with output DC 0...10 V or a switching contact. Thus the analogue signal of the sensor can be easily digitised with the thermal energy meter and transferred to the corresponding bus system.

Analogue output: An analogue output (wire 5) is available on the thermal energy meter. It can be selected as DC 0...10 V, DC 0.5...10 V or DC 2...10 V. For example, the flow rate or the temperature of the temperature sensor T1/T2 can be output as an analogue value.

Wire colours:

1 = black

2 = red


3 = white

5 = orange


6 = pink

7 = grey

AC/DC 24 V, output signal

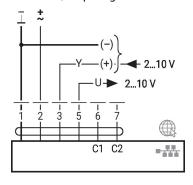

BACnet MS/TP / Modbus RTU

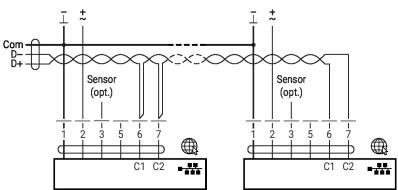



www.belimo.com




Electrical installation


BACnet/IP / Modbus TCP

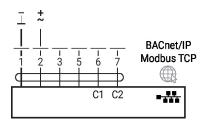



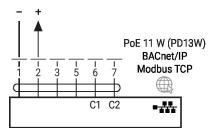







Optional connection via RJ45 (direct connection to notebook / connection via Intranet or Internet) for access to the integrated web server


Converter for sensors

Connection with passive sensor

Connection with switching contact Connection with active sensor

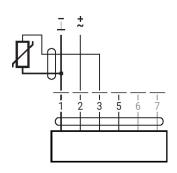

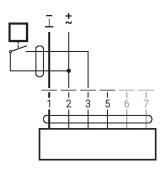

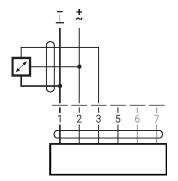


e.a. 1N 4007

Further electrical installations

Functions with specific parameters (configuration necessary)

Override control and limiting with AC 24 V with relay contacts (with conventional control or hybrid mode, not for differential pressure control)

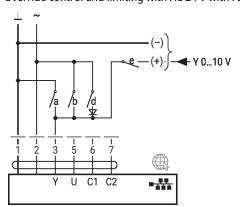

						<u>.</u>	g. 114 -1007
1	2	а	b	d	е		lnv.
→ L	→L	⊸~L	~	<u></u>	~	Close ¹⁾	Open ¹⁾
⊸ \	₽\L	⊸\L	→	- - -	√ -	V′ 2)	V' 2)
⊸_L	→\L	⊸^L	→	- - -	→	Q' 3)	Q' _{max} ³⁾
~L	¥	\	↓		\	V' _{max}	V' _{max}
~_	~L	-		~L	\ <u>_</u>	Open	Open
→ L	↓	-	→ -		¥	Υ	Υ

- 1) Position control
- 2) Flow control
- 3) Power control


Inv. = control signal inverted



Further electrical installations

Functions with specific parameters (configuration necessary)

Override control and limiting with DC 24 V with relay contacts (with conventional control or hybrid mode, not for differential pressure control)

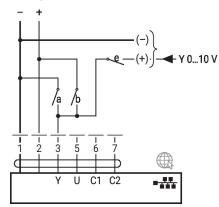


1	2	а	b	е		Inv.
⊸_L	⊸~L	⊸~L	<u>-</u>		Close ¹⁾	Open ¹⁾
⊸-L	⊸/L	⊸~L	-	- - -	V' 2)	V' 2)
⊸^L	↓ L	⊸~L	\	\- -	Q' _{min} ³⁾	Q' _{max} ³⁾
→\L	→L	~	→ -	Å.	Υ	Υ
→\L	→L	<u>~</u> _	→\L	-	Open ¹⁾	Open ¹⁾
⊸ L	⊸~L	<u>~_</u>	→\L	 	V′ 2)	V′ 2)
~L	⊸~L	<u>~</u> _	⊸~L	<u>~_</u>	Q' _{max} ³⁾	Q' _{max} 3)


- 1) Position control
- 2) Flow control
- 3) Power control

Inv. = control signal inverted

BACnet MS/TP / Modbus RTU with analogue setpoint (hybrid mode)

BACnet/IP / Modbus TCP with analogue setpoint (hybrid mode)

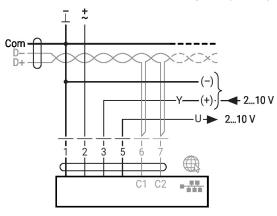


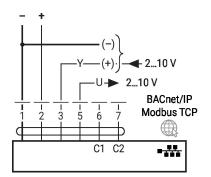



MP-Bus, supply via 3-wire connection

MP-Bus via 2-wire connection, local power supply

MP-Bus with analogue setpoint (hybrid mode)

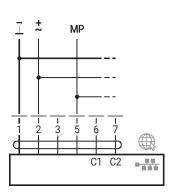

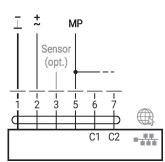

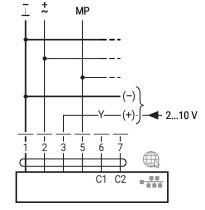





Further electrical installations

Functions with specific parameters (configuration necessary)


M-Bus with converter

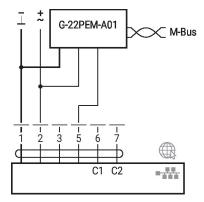


M-Bus via Converter M-Bus

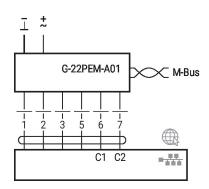


M-Bus parallel Modbus TCP or BACnet/IP

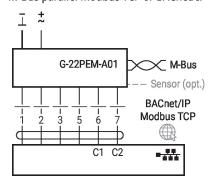

M-Bus parallel Modbus TCP or BACnet/IP with PoE

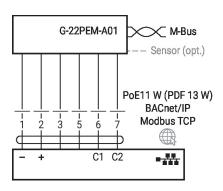

M-Bus parallel Modbus RTU or BACnet MS/TP

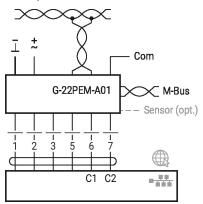





Further electrical installations

Operating mode differential pressure control


Connection of differential pressure sensor 22WDP-11.. (sensor not included)

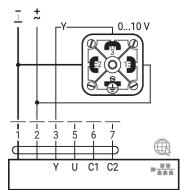

Connection of differential pressure sensor 22PDP-18.. (sensor not included)

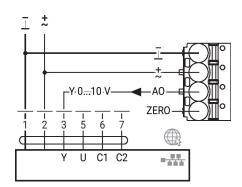

Operating controls and indicators

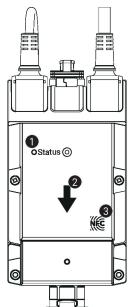

1 LED display green

On: Device starting up Flashing: In operation (Power ok)

Off: No power

- 2 Flow direction
- 3 NFC interface
- 4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible

Release button: Gear train engages, standard mode

www.belimo.com


(



Operating controls and indicators

Setting fail-safe position


Setting fail-safe position (POP)

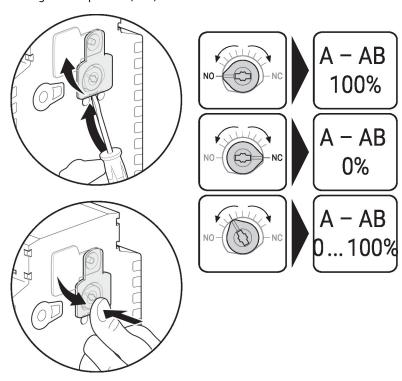

Installation notes

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the spindle pointing downwards.

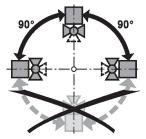

Installation location in return

Installation in the return is recommended.

Water quality requirements

The water quality requirements specified in VDI 2035 must be adhered to.

Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

Servicing

Ball valves, rotary actuators and sensors are maintenance-free.

Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.

Flow direction

The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the flow rate will be measured incorrectly.



Installation notes

Cleaning of pipes

Before installing the thermal energy meter, the circuit must be thoroughly rinsed to remove impurities.

Prevention of stresses


The thermal energy meter must not be subjected to excessive stress caused by pipes or fittings.

Inlet section

A flow calming section or inlet section in the direction of the flow must be maintained in front of the flow sensor to achieve the specified measuring accuracy.

According to EN 1434-4:2022 (out-of-plane double 90° bends), an inlet section of 0x DN is applicable. In all other cases, EN 1434-6:2022, Annex A.4, recommends an inlet section of $\geq 5x$ DN. See also the Belimo application information on the inlet section according to EN 1434.

- a) Recommended installation locations
- b) Prohibited installation location due to the danger of air accumulation
- c) Installation immediately after valves is prohibited. Exception: If it is a shut-off valve without constriction and it is 100% open
- d) Installation on the suction side of a pump is not recommended

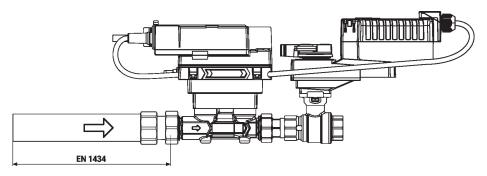


Mounting of immersion sleeve and temperature sensor

The valve is equipped with two fully-wired temperature sensors.

- T2: This sensor is installed in the thermal energy meter.
- T1: This sensor has to be installed on site ahead of the consumer (valve in the return line; recommended) or after the consumer (valve in the supply line).

Note

The cables between valve unit and temperature sensors may not be shortened or extended.

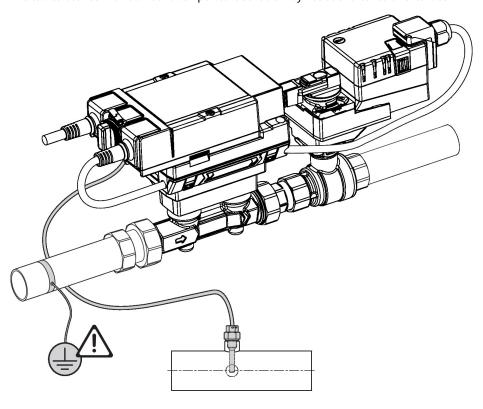



Installation notes

Split installation

The valve-actuator combination may be mounted separately from the flow sensor. The direction of flow of both components must be observed.

General notes

Valve selection

The valve is determined using the maximum required flow rate V'max.

A calculation of the Kvs value is not required.

V'max = 30...100% of V'nom

If no hydronic data is available, the same valve DN can be selected as the heat exchanger nominal diameter.

Minimum differential pressure (pressure drop)

The minimum required differential pressure (pressure drop through the valve) for achieving the desired flow V'max can be calculated with the aid of the theoretical Kvs value (see type overview) and the below-mentioned formula. The calculated value is dependent on the required maximum flow V'max. Higher differential pressures are compensated for automatically by the valve.

Formula

$$\Delta p_{min} = 100 \text{ x} \left(\frac{V'_{max}}{K_{vs} \text{ theor.}} \right)^2 \begin{cases} \Delta p_{min} \text{; kPa} \\ V'_{max} \text{: m}^3 / h \\ K_{vs} \text{ theor.: m}^3 / h \end{cases}$$

Example (DN 25 with the desired maximum flow rate = 50% V'nom)

EV025R2+KBAC

 K_{vs} theor. = 8.8 m³/h V'_{nom} = 58.3 l/min

50% x 58.3 l/min = 29.2 l/min = 1.75 m³/h

$$\Delta p_{min} = 100 \text{ x} \left(\frac{V'_{max}}{K_{vs} \text{ theor.}} \right)^2 = 100 \text{ x} \left(\frac{1.75 \text{ m}^3/\text{h}}{8.8 \text{ m}^3/\text{h}} \right)^2 = 4 \text{ kPa}$$

Behaviour in case of sensor failure

In case of a flow sensor error, the Energy Valve will switch from either power or flow control to position control (Delta-T manger will be deactivated).

Once the error disappears, the Energy Valve will switch back to the normal control setting (Delta-T manager activated)



Service

Wireless connection


Belimo devices marked with the NFC logo can be operated with Belimo Assistant 2. Requirement:

- NFC- or Bluetooth-capable smartphone
- Belimo Assistant 2 (Google Play and Apple AppStore)

Align NFC-capable smartphone on the device so that both NFC antennas are superposed. Connect Bluetooth-enabled smartphone via the Bluetooth-to-NFC converter ZIP-BT-NFC to the


device. Technical data and operating instructions are shown in the ZIP-BT-NFC data sheet.


Readable values: volumetric flow, accumulated flow, fluid temperature, glycol content in %, alarm/error messages

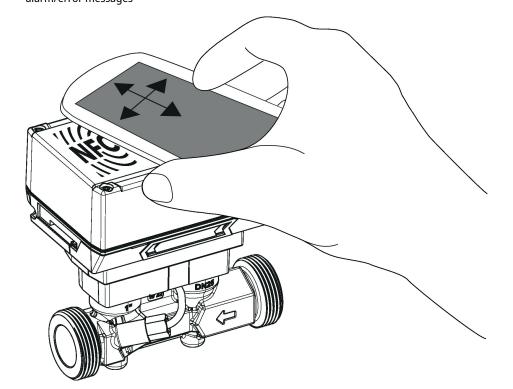



Dimensions

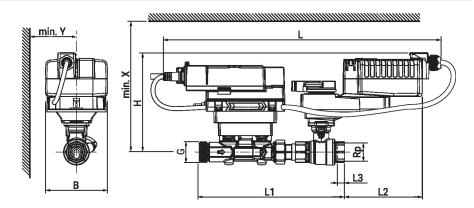

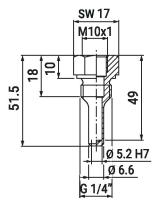

Туре	DN	Rp	G	L	L1	L2	L3	В	Н	X	Y	മ
		["]	["]	[mm]	/ kg \							
EV050R2+KBAC-N	50	2	2 1/2	472	294	100	22	90	152	222	80	5.7

Further documentation

- Data sheet thermal energy meter
- Overview MP Cooperation Partners
- Tool connections
- General notes for project planning
- Instruction Webserver
- Description Data-Pool Values
- BACnet Interface description
- Modbus Interface description
- Introduction to MP-Bus Technology
- Installation instructions for actuators and/or ball valves
- Differential pressure control with the Belimo Energy Valve™
- Quick Guide Belimo Assistant 2