

# Configurable globe valve actuator for 2-way and 3-way globe valves

- Actuating force 2500 N
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V variable
- Stroke 40 mm



Picture may differ from product

_				
	20	nn	IC 2	data

Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	11 W
Power consumption in rest position	1.5 W
Power consumption for wire sizing	18 VA
Connection supply / control	Cable 1 m, 4x 0.75 mm²
Parallel operation	Yes (note the performance data)
Actuating force motor	2500 N

# **Functional data**

Connection supply / Control	Cable 1 III, 4x 0.75 IIIIII			
Parallel operation	Yes (note the performance data)			
Actuating force motor	2500 N			
Operating range Y	210 V			
Input impedance	100 kΩ			
Operating range Y variable	Start point 0.530 V End point 2.532 V			
Operating modes optional	Open/close 3-point (AC only) Modulating (DC 032 V)			
Position feedback U	210 V			
Position feedback U note	Max. 0.5 mA			
Position feedback U variable	Start point 0.58 V End point 2.510 V			
Position accuracy	±5%			
Manual override	with push-button, can be locked			
Stroke	40 mm			
Running time motor	35 s / 40 mm			
Running time motor variable	3590 s			
Sound power level, motor	65 dB(A)			
Adaptation setting range	manual (automatic on first power-up)			
Adaptation setting range variable	No action Adaptation when switched on Adaptation after pushing the manual override button			
Override control	MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50%			
Override control variable	MAX = (MIN + 33%)100% ZS = MINMAX			
Position indication	Mechanical, 540 mm stroke			



#### Safety data

Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
Power source UL	Class 2 Supply
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2
Housing	UL Enclosure Type 2
EMC	CE according to 2014/30/EU
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
Type of action	Type 1
Rated impulse voltage supply / control	0.8 kV
Pollution degree	3
Ambient humidity	Max. 95% RH, non-condensing
Ambient temperature	050°C [32122°F]
Storage temperature	-4080°C [-40176°F]
Servicing	maintenance-free
Weight	3.7 kg

# Safety notes



Weight

- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
  aggressive gases interfere directly with the device and that it is ensured that the ambient
  conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The switch for changing the direction of motion and so the closing point may be adjusted only by authorised specialists. The direction of motion is critical, particularly in connection with frost protection circuits.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

# **Product features**

Operating mode

The actuator is connected with an analogue control signal Y (note the operating range) and drives to the position defined. The measuring voltage U serves for the electrical display of the actuator position 0...100% and as control signal for other actuators.

Configurable device

The factory settings cover the most common applications. Single parameters can be modified with Belimo Assistant 2 or ZTH EU.

Simple direct mounting

Simple direct mounting on the globe valve by means of form-fit hollow clamping jaws. The actuator can be rotated by 360° on the valve neck.



#### **Product features**

Manual override

Manual override with push-button possible (the gear train is disengaged for as long as the

button is pressed or remains locked).

The stroke can be adjusted by using a hexagon socket screw key (5 mm), which is inserted

into the top of the actuator. The stem extends when the key is rotated clockwise.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when

the end stop is reached.

**Position indication** 

The stroke is indicated mechanically on the bracket with tabs. The stroke range adjusts itself

automatically during operation.

Home position

Factory setting: Actuator stem is retracted.

When valve-actuator combinations are shipped, the direction of motion is set in accordance

with the closing point of the valve.

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaptation, which is when the operating range and position feedback adjust

themselves to the mechanical setting range.

The actuator then moves into the position defined by the control signal.

Adaptation and synchronisation

An adaptation can be triggered manually by pressing the "Adaptation" button or with Belimo

Assistant 2. Both mechanical end stops are detected during the adaptation (entire setting

range).

Automatic synchronisation after pressing the manual override button is configured. The

synchronisation is in the home position (0%).

The actuator then moves into the position defined by the control signal.

A range of settings can be made using Belimo Assistant 2.

Setting direction of motion

When actuated, the direction-of-stroke switch changes the direction of motion in normal

operation.

#### Accessories

Tools	Description	Туре
	Service tool, with ZIP-USB function, for configurable and communicative	ZTH EU
	Belimo actuators, VAV controller and HVAC performance devices	
	Service tool for wired and wireless setup, on-site operation and troubleshooting.	Belimo Assistant 2
	Adapter for Service-Tool ZTH	MFT-C
	Connecting cable 5 m, A: RJ11 6/4 LINK.10, B: 6-pin for connection to service socket	ZK1-GEN
	Connecting cable 5 m, A: RJ11 6/4 LINK.10, B: free wire end for connection to MP/PP terminal	ZK2-GEN
	Belimo Assistant Link Bluetooth and USB to NFC and MP-Bus converter for configurable and communicative devices	LINK.10
Electrical accessories	Description	Туре
	Auxiliary switch 2x SPDT add-on	S2A-H

#### **Electrical installation**



Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data. Direction of stroke switch factory setting: Actuator stem retracted ( $\blacktriangle$ ).




# **Electrical installation**

#### Wire colours:

- 1 = black
- 2 = red
- 3 = white
- 4 = pink
- 5 = orange


# AC/DC 24 V, modulating

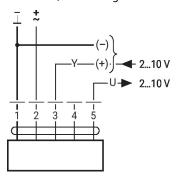

# Further electrical installations

# Functions with basic values (conventional mode)


Override control with AC 24 V with relay contacts

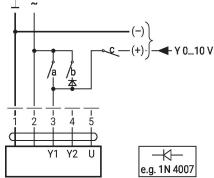


_	$\perp$
	N
e.g.	1N 4007

1	2	а	b	С	
⊸~L	⊸~L	~			0 %
⊸~L	⊸_L	~ <u>~</u>	⊸~L		ZS 50%
⊸~L	⊸_L	⊸~L			100%
→-L	⊸~L	~	-J	⊸~L	Υ

Override control with AC 24 V with rotary switch

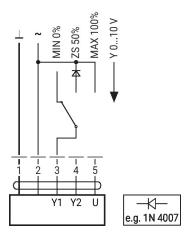


Control remotely 0...100% with positioner SG..

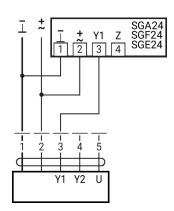




#### Functions with basic values (conventional mode)


Minimum limit with positioner SG..

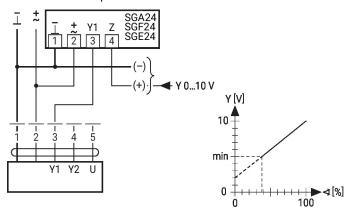


Primary/secondary operation (position-dependent)

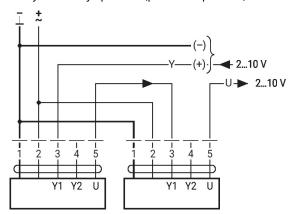

Control with 4...20 mA via external resistor

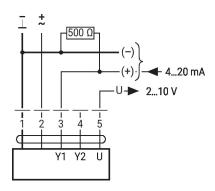



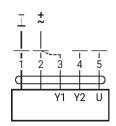


#### Procedure

- 1. Apply 24 V to connection 1 and 2
- 2. Disconnect connection 3:
- with upwards direction of motion: closing point at top
- with downwards direction of motion: closing point at bottom
- 3. Short circuit connections 2 and 3:
- Actuator runs in the opposite direction


# Functions with specific parameters (configuration necessary)

Override control and limiting with AC 24 V with relay contacts

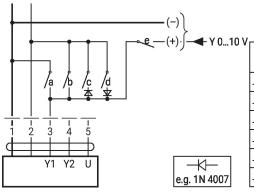

V								
٧	1	2	а	b	С	d	е	
	⊸~L	→\L	→\L	<b>⊸</b> _		~	~	Close <sup>1)</sup>
	⊸~L	→\L	<b>⊸</b>	<b>→</b>	- <del></del> -	<b>⊸</b>	<b>→</b>	MIN
	⊸~L	→\L	<b>⊸</b>	<b>→</b>	⊸_L	<b>⊸</b>	<b>⊸</b> _	ZS
	⊸~L	⊸~L		₩L	-J		~	MAX
	⊸_L	⊸~L	<b>→</b>	<b>→</b>	- <del>-</del> -	⊸/L		Open
	<b>⊸</b> L	~L	<u>~_</u>	<del>-</del>	<u>~</u> -	<b>⊸</b> -	⊸~L	Υ

Control open/close

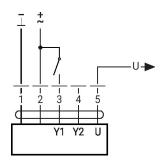




# Further electrical installations

# Functions with specific parameters (configuration necessary)


Override control and limiting with AC 24 V with rotary switch

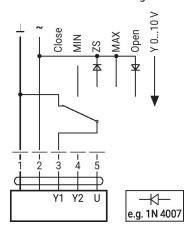

## Caution:

The "Close" function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.


# Control 3-point

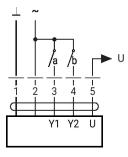

1	2	3	4		
→\L	⊸^L	→\L	<b>→</b>	<b>±</b>	<b>₹</b>
→\L	⊸^L	→\L	<b>↓</b> L	₹	₹
→ L	⊸~L	~ <u>~</u>	<b>⊸</b>	stop	stop
→\L	<b>⊸</b> L		⊸/L	Ŧ	<u></u>



# Operating controls and indicators

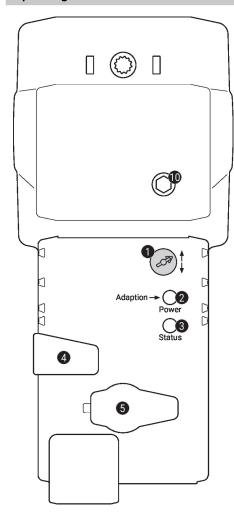

Direction-of-stroke switch

Switch over: Direction of stroke changes

2 Push-button and LED display green

Off: No power supply or malfunction

On: In operation

Press button: Triggers stroke adaptation, followed by standard mode

3 Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Press button: No function

4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible

Release button: Gear train engages, standard mode

**5** Service plug

For connecting configuration and service tools

10 Manual override

Clockwise: Actuator stem extends
Counterclockwise: Actuator stem retracts


### Service

#### Wired connection

The device can be configured by ZTH EU via the service socket.


For an extended configuration, Belimo Assistant 2 can be connected.

Connection ZTH EU / Belimo Assistant 2

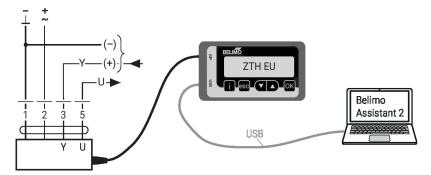



# **Dimensions**

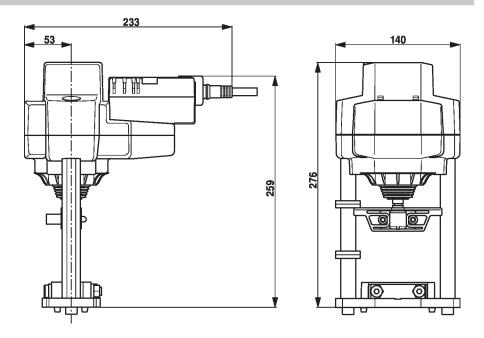

# **Further documentation**

- The complete product range for water applications
- Data sheets for globe valves
- Installation instructions for actuators and/or globe valves
- Notes for project planning 2-way and 3-way globe valves
- General notes for project planning
- Quick Guide Belimo Assistant 2