

Configurable damper actuator for adjusting dampers in technical building installations

- Air damper size up to approx. 8 m²
- Torque motor 40 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V variable
- Position feedback 2...10 V variable



Picture may differ from product

Technical data

Electrical data	Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz	
Nominal voltage range	AC 19.2...28.8 V / DC 21.6...28.8 V	
Power consumption in operation	4.5 W	
Power consumption in rest position	1.5 W	
Power consumption for wire sizing	7 VA	
Connection supply / control	Cable 1 m, 4x 0.75 mm ²	
Parallel operation	Yes (note the performance data)	
Functional data		
Torque motor	40 Nm	
Torque variable	25%, 50%, 75% reduced	
Operating range Y	2...10 V	
Input impedance	100 kΩ	
Operating range Y variable	Start point 0.5...30 V End point 2.5...32 V	
Operating modes optional	Open/close 3-point (AC only) Modulating (DC 0...32 V)	
Position feedback U	2...10 V	
Position feedback U note	Max. 0.5 mA	
Position feedback U variable	Start point 0.5...8 V End point 2...10 V	
Position accuracy	±5%	
Direction of motion motor	selectable with switch 0/1	
Direction of motion variable	electronically reversible	
Direction of motion note	Y = 0 V: At switch position 0 (ccw rotation) / 1 (cw rotation)	
Manual override	with push-button, can be locked	
Angle of rotation	Max. 95°	
Angle of rotation note	can be limited on both sides with adjustable mechanical end stops	
Running time motor	150 s / 90°	
Running time motor variable	75...290 s	
Sound power level, motor	45 dB(A)	
Adaptation setting range	manual	


Functional data	Adaptation setting range variable	No action Adaptation when switched on Adaptation after pushing the manual override button
Override control		MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50%
Override control variable		MAX = (MIN + 32%)...100% MIN = 0%...(MAX - 32%) ZS = MIN...MAX
Mechanical interface		Universal shaft clamp reversible 12...26.7 mm
Position indication		Mechanical, pluggable
Safety data		
Protection class IEC/EN		III, Safety Extra-Low Voltage (SELV)
Power source UL		Class 2 Supply
Degree of protection IEC/EN		IP54
Degree of protection NEMA/UL		NEMA 2
Housing		UL Enclosure Type 2
EMC		CE according to 2014/30/EU
Certification IEC/EN		IEC/EN 60730-1 and IEC/EN 60730-2-14
UL Approval		cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
Type of action		Type 1
Rated impulse voltage supply / control		0.8 kV
Pollution degree		3
Ambient humidity		Max. 95% RH, non-condensing
Ambient temperature		-30...50°C [-22...122°F]
Storage temperature		-40...80°C [-40...176°F]
Servicing		maintenance-free
Weight	Weight	1.6 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section and the design, as well as the installation situation and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

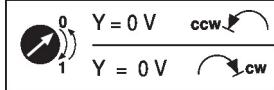Operating mode	The actuator is connected with an analogue control signal Y (note the operating range) and drives to the position defined. The measuring voltage U serves for the electrical display of the damper position 0...100% and as control signal for other actuators.
Configurable device	The factory settings cover the most common applications. Single parameters can be modified with Belimo Assistant 2 or ZTH EU.
Simple direct mounting	Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti-rotation mechanism to prevent the actuator from rotating.
Manual override	Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).
Adjustable angle of rotation	Adjustable angle of rotation with mechanical end stops.
High functional reliability	The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.
Home position	<p>The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out a synchronisation. The synchronisation is in the home position (0%).</p> <p>The actuator then moves into the position defined by the control signal.</p>
	
Adaptation and synchronisation	<p>An adaptation can be triggered manually by pressing the "Adaptation" button or with Belimo Assistant 2. Both mechanical end stops are detected during the adaptation (entire setting range).</p> <p>Automatic synchronisation after pressing the manual override button is configured. The synchronisation is in the home position (0%).</p> <p>The actuator then moves into the position defined by the control signal.</p> <p>A range of settings can be made using Belimo Assistant 2.</p>

Accessories

Tools	Description	Type
	Service tool, with ZIP-USB function, for configurable and communicative Belimo actuators, VAV controller and HVAC performance devices	ZTH EU
	Service tool for wired and wireless setup, on-site operation and troubleshooting.	Belimo Assistant 2
	Adapter for Service-Tool ZTH	MFT-C
	Connecting cable 5 m, A: RJ11 6/4 LINK.10, B: 6-pin for connection to service socket	ZK1-GEN
	Connecting cable 5 m, A: RJ11 6/4 LINK.10, B: free wire end for connection to MP/PP terminal	ZK2-GEN
	Belimo Assistant Link Bluetooth and USB to NFC and MP-Bus converter for configurable and communicative devices	LINK.10
Electrical accessories	Description	Type
	Auxiliary switch 1x SPDT add-on	S1A
	Auxiliary switch 2x SPDT add-on	S2A
	Feedback potentiometer 140 Ω add-on	P140A
	Feedback potentiometer 1 kΩ add-on	P1000A
	Feedback potentiometer 10 kΩ add-on	P10000A
	Positioner for wall mounting	CRP24-B1
Mechanical accessories	Description	Type
	Actuator arm for standard shaft clamp	AH-GMA

Accessories

Description	Type
Ball joint suitable for damper crank arm KH8 / KH10	KG10A
Damper crank arm Slot width 8.2 mm, clamping range ø14...25 mm	KH10
Anti-rotation mechanism 230 mm, Multipack 20 pcs.	Z-ARS230
Mounting kit for linkage operation for flat installation	ZG-GMA
Baseplate extension for GM..A to GM..	Z-GMA
Position indicator, Multipack 20 pcs.	Z-PI

Electrical installation




Supply from isolating transformer.


Wire colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange

AC/DC 24 V, modulating

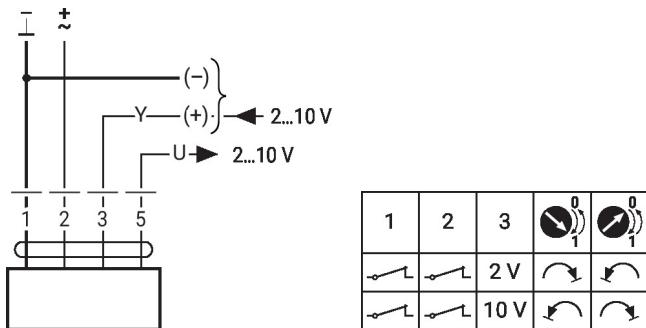


Parallel operation

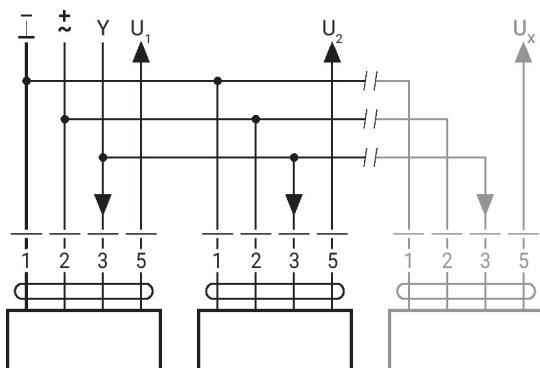

- Max. 8 actuators in parallel
- Parallel operation is permitted only on non-connected axes
- Do not fail to observe performance data with parallel operation

Electrical installation

Wiring diagram piggy-back operation (mechanically coupled actuators)

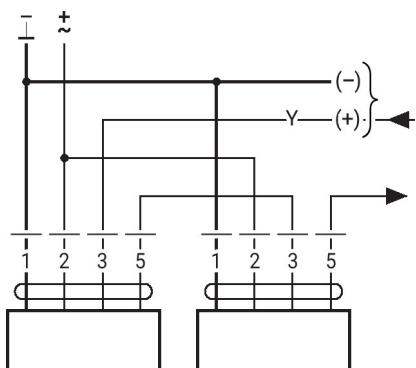


- Max. 2 actuators in primary/secondary operation
- Primary/secondary operation is permitted only on one fixed shaft or on two mechanically coupled shafts
- The programming of the primary actuator is adopted by the secondary actuator

Further electrical installations

Functions with basic values (conventional mode)


Override control with AC 24 V with relay contacts

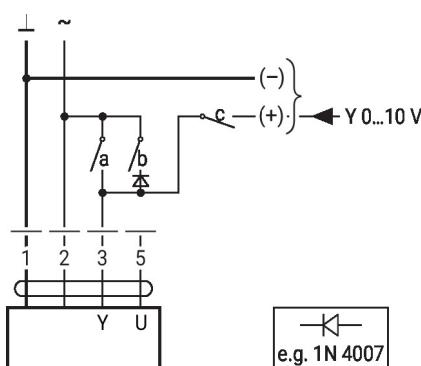

1	2	a	b	c	
↙	↙	↙	↙	↙	0 %
↙	↙	↙	↙	↙	ZS 50%
↙	↙	↙	↙	↙	100 %
↙	↙	↙	↙	↙	Y



e.g. 1N 4007

Override control with AC 24 V with rotary switch

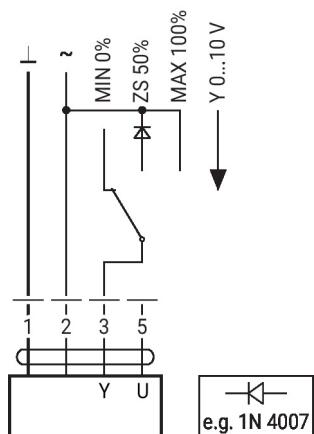


Control remotely 0...100% with positioner SG..

Minimum limit with positioner SG..

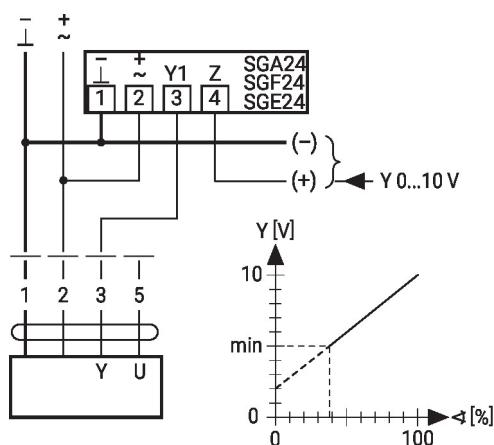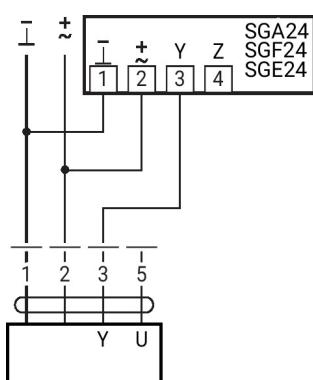


Functions with basic values (conventional mode)

Primary/secondary operation (position-dependent)

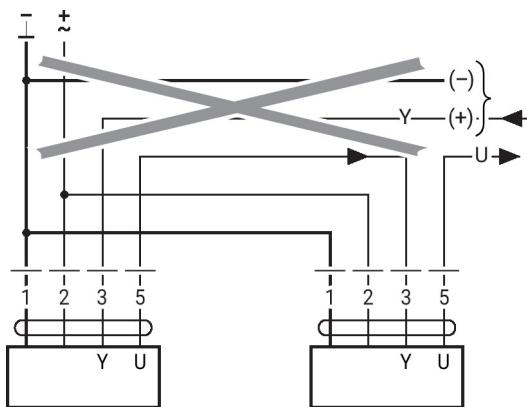

Control with 4...20 mA via external resistor

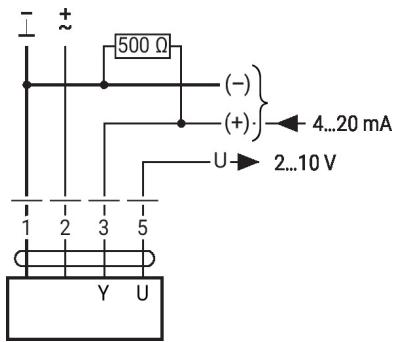


Caution:

The operating range must be set to DC 2...10 V.

The 500 Ohm resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V.

Functional check

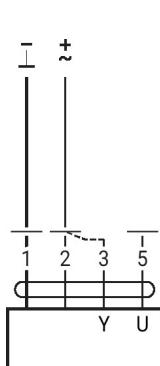

Procedure


1. Connect 24 V to connections 1 and 2
2. Disconnect connection 3:
 - With direction of rotation 0: Actuator rotates to the left
 - With direction of rotation 1: Actuator rotates to the right
3. Short-circuit connections 2 and 3:
 - Actuator runs in opposite direction

Further electrical installations


Functions with specific parameters (configuration necessary)

Override control and limiting with AC 24 V with relay contacts

Control open/close

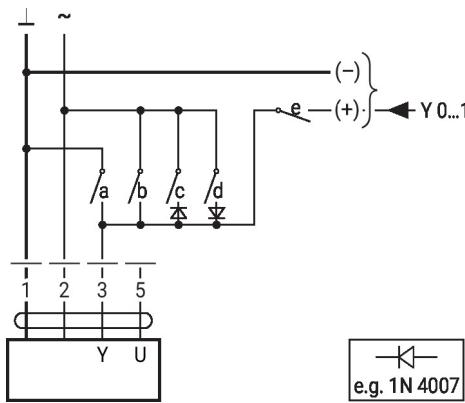


1	2	a	b	c	d	e	
o—	Close						
o—	MIN						
o—	ZS						
o—	MAX						
o—	Open						
o—	Y						

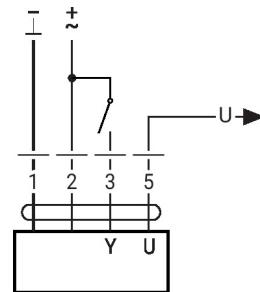


Override control and limiting with AC 24 V with rotary switch

Control 3-point with AC 24 V

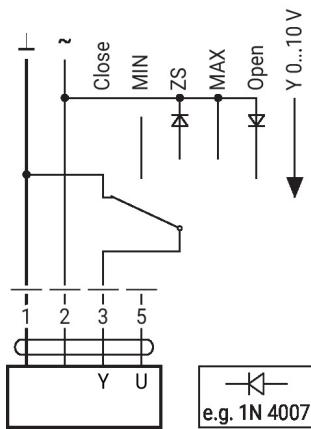


Caution:

The "Close" function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.

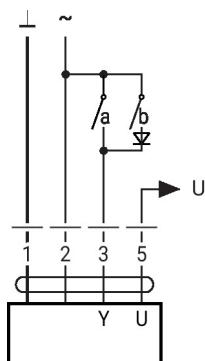

1	2	3 (a)	3 (b)	stop	stop
o—	o—	o—	o—	o—	o—
o—	o—	o—	o—	o—	o—
o—	o—	o—	o—	o—	o—
o—	o—	o—	o—	o—	o—

Operating controls and indicators

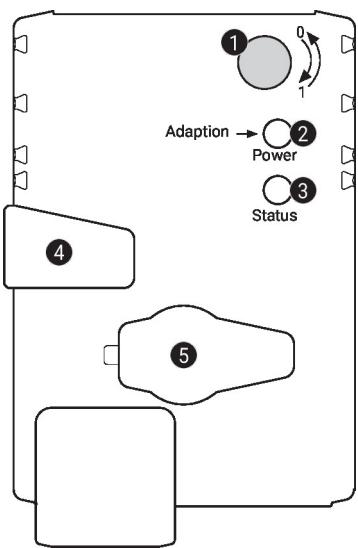

① Direction-of-rotation switch

Switch over: Direction of rotation changes

② Push-button and LED display green

Off: No power supply or malfunction

On: In operation

Press button: Triggers angle-of-rotation adaptation, followed by standard mode

③ Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Press button: No function

④ Manual override button

Press button: Gear train disengages, motor stops, manual override possible

Release button: Gear train engages, synchronisation starts, followed by standard mode

⑤ Service plug

For connecting configuration and service tools

Check power supply connection

② Off and ③ On Possible wiring error in power supply


Service

Wired connection

The device can be configured by ZTH EU via the service socket.

For an extended configuration, Belimo Assistant 2 can be connected.


Connection ZTH EU / Belimo Assistant 2

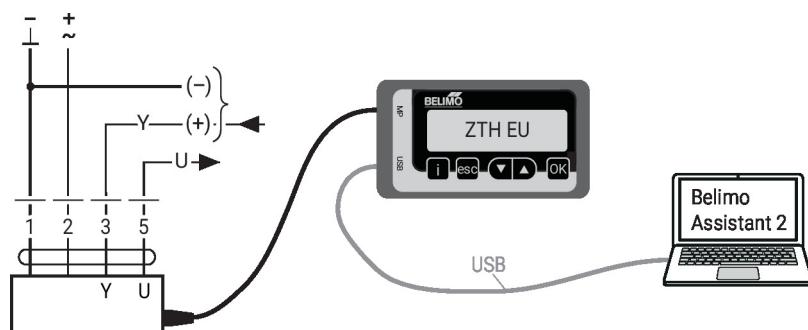

Dimensions


Spindle length

	Min. 52 mm [2.05"]
	Min. 20 mm [0.75"]

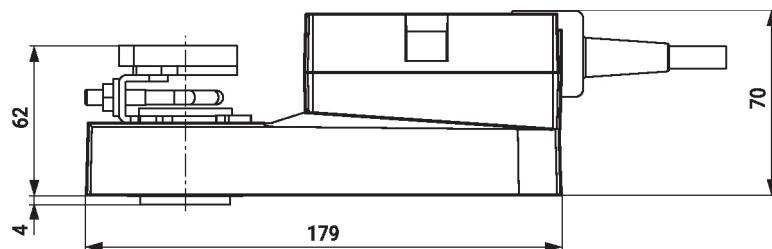

Clamping range

	12...22		12...18
	22...26.7		12...18

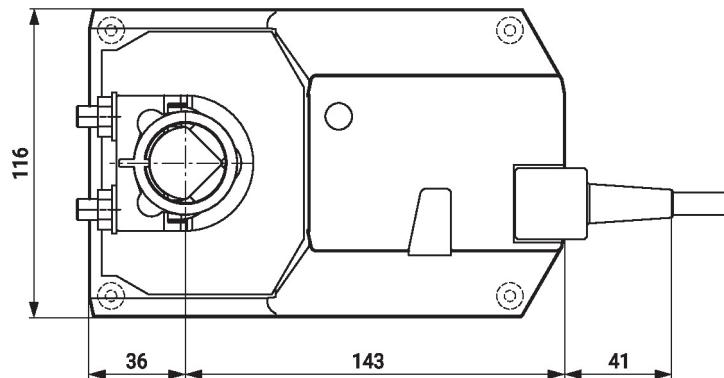

Further documentation

- Quick Guide – Belimo Assistant 2