

VAV-Compact unit retrofit version – with VAV controller, dynamic Δp sensor and damper actuator

- Field of application: VAV units in comfort applications
- Application: VAV/CAV, position control
- Belimo D3, dynamic flow sensor
- Functional range differential pressure 0...500 Pa
- Control communicative, modulating (0/2...10 V)
- Communication via Belimo MP-Bus
- Conversion of sensor signals
- Tool connection: Service socket, NFC interface
- For configuration, a RetroFIT+ release code is needed



Picture may differ from product

Technical data

Electrical data	Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz	
Nominal voltage range	AC 19.2...28.8 V / DC 21.6...28.8 V	
Power consumption in operation	3 W	
Power consumption in rest position	1.5 W	
Power consumption for wire sizing	5 VA	
Inrush current (Imax)	8.0 A @ 5 ms	
Connection supply / control	Cable 1 m, 4x 0.75 mm ²	
Data bus communication	Communicative control	MP-Bus
	Number of nodes	MP-Bus max. 8
Functional data		
Torque motor	10 Nm	
Operating range Y	2...10 V	
Input impedance	100 k Ω	
Operating range Y variable	0...10 V	
Position feedback U	2...10 V	
Position feedback U note	Max. 0.5 mA	
Position feedback U variable	Start point 0...8 V End point 2...10 V	
V'max adjustable	20...100% of V'nom	
V'mid adjustable	>V'min...<V'max	
V'min adjustable	0...100% of V'nom (<V'max)	
Manual override	with push-button, can be locked	
Angle of rotation	95°	
Angle of rotation note	adjustable mechanical or electrical limitation	
Mechanical interface	Universal shaft clamp 8...26.7 mm	
Position indication	Mechanical	
Measuring data		
Measuring principle	Belimo D3, dynamic flow sensor	
Installation orientation	position-independent, no zeroing necessary	
Functional range differential pressure	0...500 Pa	
Maximum system pressure	1500 Pa	
Burst pressure	±5 kPa	
Height compensation	Adjustment of system height (range 0...3000 m above sea level)	
Condition measuring air	0...50°C / 5...95% RH, non-condensing	
Pressure tube connection	Nipple diameter 5.3 mm	

Technical data

Safety data	Protection class IEC/EN	III, Protective Extra-Low Voltage (PELV)
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Housing	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	Type of action	Type 1
	Rated impulse voltage supply / control	0.8 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	0...50°C [32...122°F]
	Storage temperature	-20...80°C [-4...176°F]
	Servicing	maintenance-free
Weight	Weight	0.78 kg

Safety notes



- The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.
- Outdoor application: Only possible if no (sea) water, snow, ice, sunlight or aggressive gases act directly on the device and if it is ensured that the ambient conditions remain within the limit values specified in the data sheet at all times.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Application	The VAV-Compact unit is used for comfort applications for pressure-independent control of VAV units. See Technical brochure – VAV-Compact product range for volumetric flow applications.
Pressure measurement	The integrated differential pressure sensor is also suitable for very small volumetric flows. The maintenance-free sensor technology enables a wide range of applications in the HVAC comfort area such as in residential buildings, offices, hotels, etc.
Actuators	For the various applications and damper designs, various actuator variants with torque 5, 10 or 20 Nm are available to the VAV unit manufacturer.
Control functions	Volumetric flow (VAV/CAV) or position control (Open Loop)

Product features

Application Variable Air Volume (VAV)	Variable air volume control in the $V'_{\min} \dots V'_{\max}$ range, demand-dependent via a modulating reference variable (analogue or bus), e.g. room temperature or CO_2 controller for energy-saving air conditioning of individual rooms or zones. V'_{nom} , Δp @ V'_{nom} OEM-specific calibration parameters, suitable for the VAV unit Adjustment range Δp @ V'_{nom} : 38...450 Pa V'_{\max} (Max) Maximum operating volumetric flow, adjustable 20...100% V'_{nom} V'_{\min} (Min) Minimum operating volumetric flow, adjustable 0...100% V'_{nom}
Application Constant Air Volume (CAV)	Constant volumetric flow control. If required, via step switching (switching contacts) for constant volumetric flow applications. Steps: CLOSE / Min / Max / OPEN (Mid)
Application Position Control (Open Loop)	Position control for integration of the VAV-Compact into an external VAV control loop. Transmitter and actuator unit. Max Range: 20...100 % rotation range Min Range: 0...100 % rotation range
Demand Controlled Ventilation (DCV)	Output of the demand signal (damper position) to the higher-level automation system – DCV function.
Bus operation	Thanks to its MP-Bus functionality, the VAV-Compact can be easily integrated into a MP-Bus system. The communication interface and MP address is defined using service tools. In bus mode, a sensor (0...10 V / passive) can optionally be connected, e.g. a temperature sensor or a switching contact, for integration into the higher-level bus system.
Operating settings	Control functions Volumetric flow (VAV/CAV) or position control (Open Loop) Operating settings Min/Max/Nom
<p>Nominal value (OEM setting) Nom Adjustment range Min 1 Adjustment range Max 2 Feedback U 0...100% Nom 3 Control Y Min...Max 4</p>	
Operating and service tools	Belimo Assistant 2 or ZTH EU

Accessories

Tools	Description	Type
	Service tool for wired and wireless setup, on-site operation and troubleshooting.	Belimo Assistant 2

Accessories

	Description	Type
	Service tool, with ZIP-USB function, for configurable and communicative Belimo actuators, VAV controller and HVAC performance devices	ZTH EU
	Connecting cable 5 m, A: RJ11 6/4 LINK.10, B: 6-pin for connection to service socket	ZK1-GEN
	Connecting cable 5 m, A: RJ11 6/4 LINK.10, B: free wire end for connection to MP/PP terminal	ZK2-GEN
	Belimo Assistant Link Bluetooth and USB to NFC and MP-Bus converter for configurable and communicative devices	LINK.10
Electrical accessories	Description	Type
	Positioner for wall mounting	CRP24-B1
	Positioner for wall mounting	SGA24
Gateways	Description	Type
	Gateway MP to BACnet MS/TP	UK24BAC
	Gateway MP to Modbus RTU	UK24MOD
Mechanical accessories	Description	Type
	Airflow volume probe 100 mm for round duct, min. 2 m/s, Probe length 100 mm	EXT-AC-R100
	Airflow volume probe 125 mm for round duct, min. 2 m/s, Probe length 125 mm	EXT-AC-R125
	Airflow volume probe 160 mm for round duct, min. 2 m/s, Probe length 160 mm	EXT-AC-R160
	Airflow volume probe 200 mm for round duct, min. 2 m/s, Probe length 200 mm	EXT-AC-R200
	Airflow volume probe 250 mm for round duct, min. 2 m/s, Probe length 250 mm	EXT-AC-R250
	Airflow volume probe 315 mm for round duct, min. 2 m/s, Probe length 315 mm	EXT-AC-R315
	Airflow volume probe 400 mm for round duct, min. 2 m/s, Probe length 400 mm	EXT-AC-R400
	Airflow volume probe 500 mm for round duct, min. 2 m/s, Probe length 500 mm	EXT-AC-R500
	Airflow volume probe 630 mm for round duct, min. 2 m/s, Probe length 630 mm	EXT-AC-R630
	Airflow volume probe 200 mm for rectangular duct, min. 2 m/s, Probe length 200 mm	EXT-AC-L200
	Airflow volume probe 250 mm for rectangular duct, min. 2 m/s, Probe length 250 mm	EXT-AC-L250
	Airflow volume probe 300 mm for rectangular duct, min. 2 m/s, Probe length 300 mm	EXT-AC-L300
	Airflow volume probe 400 mm for rectangular duct, min. 2 m/s, Probe length 400 mm	EXT-AC-L400
	Airflow volume probe 500 mm for rectangular duct, min. 2 m/s, Probe length 500 mm	EXT-AC-L500
	Airflow volume probe 600 mm for rectangular duct, min. 2 m/s, Probe length 600 mm	EXT-AC-L600
	Airflow volume probe 700 mm for rectangular duct, min. 2 m/s, Probe length 700 mm	EXT-AC-L700

Electrical installation




Supply from isolating transformer.

Wire colours:


- 1 = black
- 2 = red
- 3 = white
- 5 = orange

Electrical installation


MP-Bus

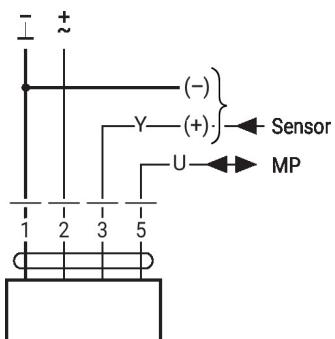

AC/DC 24 V, modulating

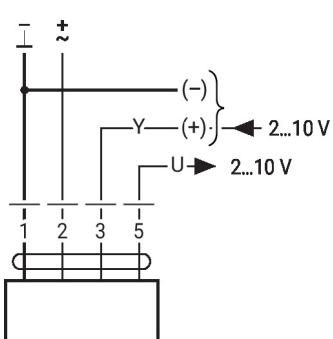


Parallel operation

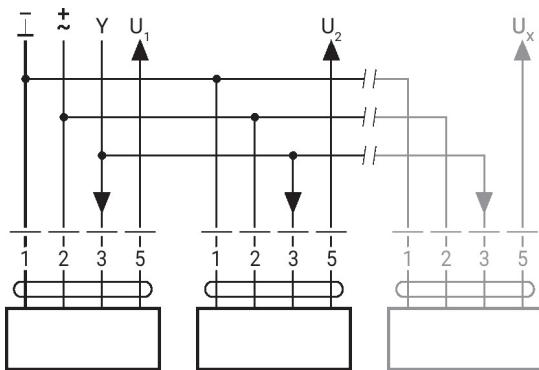

- Max. 8 actuators in parallel
- Parallel operation is permitted only on non-connected axes
- Do not fail to observe performance data with parallel operation


Primary/secondary operation

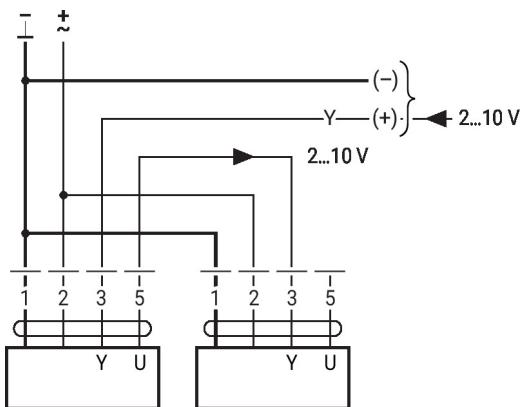

Further electrical installations


MP-Bus

Connection on the MP-Bus

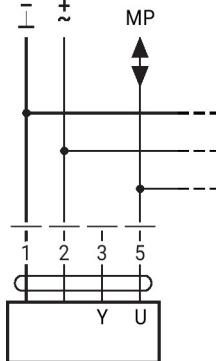


Max. 8 MP-Bus nodes

Connection of active sensors

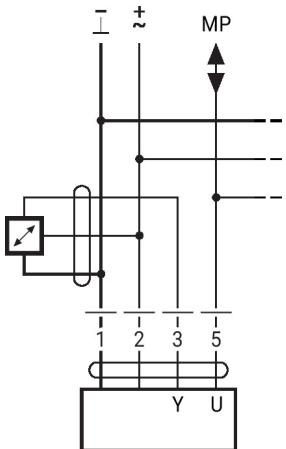


- Supply AC/DC 24 V
- Output signal 0...10 V (max. 0...32 V)
- Resolution 30 mV

Connection of external switching contact

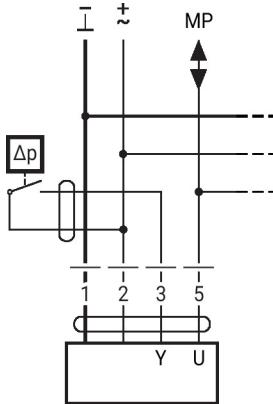

- Switching current 16 mA @ 24 V
- Start point of the operating range must be configured on the MP actuator as ≥0.5 V

Connection of passive sensors

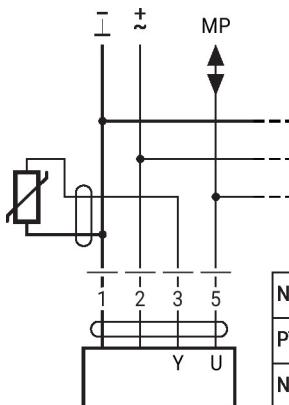

Ni1000	-28...+98°C	850...1600 Ω ²⁾
PT1000	-35...+155°C	850...1600 Ω ²⁾
NTC	-10...+160°C ¹⁾	200 Ω...60 kΩ ²⁾

1) Depending on the type


2) Resolution 1 Ohm

Compensation of the measured value is recommended

Further electrical installations



Functions with specific parameters (configuration necessary)

CAV function, Belimo Assistant 2 setting: CLOSE - V'min - V'max (shut-off level 0.1 V)

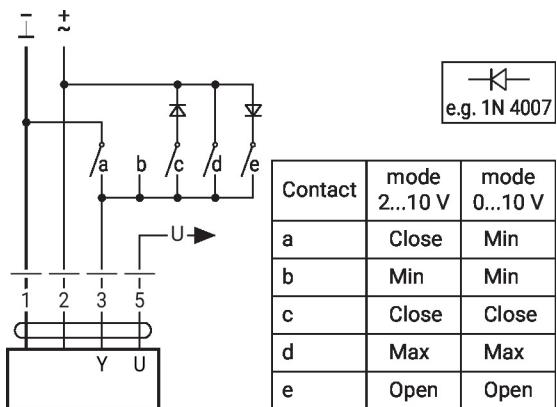

- Note that the contacts are mutually interlocking
- DC 24 V supply: option c and d not available
- Setting for CAV application: mode 2...10 V, shut-off level 0.1 V

CAV function, Belimo Assistant 2 setting: CLOSE - V'min - V'mid - V'max (NMV-D2M-compatible)

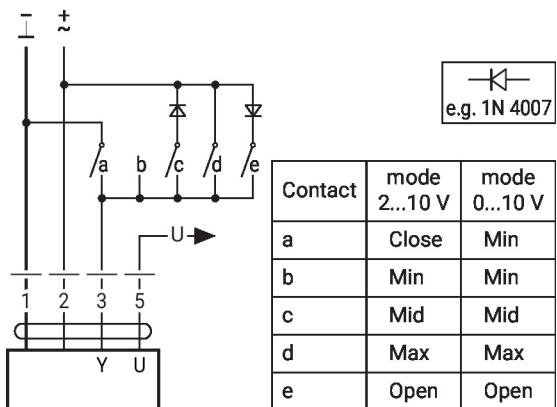

- Note that the contacts are mutually interlocking
- Setting parameters for CAV application: V'min - V'mid - V'max (NMV-D2M-compatible)

Parameter and tool overview

Settings and tool function

Designation	Setting values, limits, explanations	Units	Tool			Remarks
			ZTH EU	PC-Tool	Assistant app	
System-specific data						
Position	16 characters, e.g. Office 4 6th OG ZL	String	r	r/w	r/w	
Designation	16 characters: Unit designation, etc.	String	r	r/w ¹⁾	r	
Address	PP / MP1...8		r/w	r/w	r/w ²⁾	PP: 0...10 / 2...10 V MP1...8: MP mode
V'_{\max}	20...100% [V'_{nom}]	m^3/h / l/s / cfm	r/w	r/w	r/w	$>/= V'_{\min}$
V'_{mid}	$V'_{\min} \dots V'_{\max}$	m^3/h / l/s / cfm	r/w	r/w	r/w	
V'_{\min}	0...100% [V'_{nom}]	m^3/h / l/s / cfm	r/w	r/w	r/w	$</= V'_{\max}$
Altitude of installation	0...3000	m	r/w	r/w	r/w	Adaptation of Δp sensor to altitude (meters above sea level)
Controller Settings						
Control function	Volumetric flow / Position control (Open Loop)		–	r/w	r/w ²⁾	
Mode	0...10 / 2...10	V	r/w ²⁾	r/w	r/w ²⁾	
CAV function	CLOSE/ V'_{\min} / V'_{\max} ; Shut-off level CLOSE 0.1 CLOSE/ V'_{\min} / V'_{\max} ; Shut-off level CLOSE 0.5 V'_{\min} / V'_{mid} / V'_{\max} ; (NMV-D2M-comp.)		–	r/w	–	
Positioning signal Y	Start value: 0...30; Stop value: 2...32	V	r	r/w	r	
Feedback U	Volume / Damper position / Δp		–	r/w	–	Definition of feedback signal
Feedback U	Start value: 0...8; Stop value: 2...10	V	–	r/w	–	
Behaviour when switched on (Power-on)	No action / Adaptation / Synchronisation		–	r/w	–	
Synchronisation behaviour	Y=0% Y=100%		–	r/w	–	Synchronisation at damper position 0 or 100%
Bus fail position	Last setpoint / Damper CLOSE V'_{\min} / V'_{\max} / Damper OPEN		–	r/w	–	
Unit-specific settings						
V'_{nom}	0...60'000 m^3/h	m^3/h / l/s / cfm	r	r/(w ¹⁾	r	Unit-specific setting value
$\Delta p @ V'_{\text{nom}}$	38...450	Pa	r	r/(w ¹⁾	r	Unit-specific setting value
NFC interface	Read / Read and write		–	r/(w ¹⁾	r	
Print function label			–	w	–	
Other settings						
Direction of rotation (for Y=100%)	cw/ccw		r/w ²⁾	r/w	r/w ²⁾	
Range of rotation	Adapted ²⁾ / programmed 30...95	°	–	r/w	–	
Torque	100 / 75 / 50 / 25	%		r/w		% of nominal torque
Renovation of old systems (Retrofit of old VAV units with leaking damper)						
Suppress damper leakage	Yes / No		–	r/w ¹⁾	–	Suppresses volume display with damper closed


¹⁾ Write function accessible only with a Retrofit release code²⁾ Access only via Servicing level 2²⁾ Within the mechanical limitation

Parameter and tool overview

Settings and tool function

Designation	Setting values, limits, explanations	Units	Tool			Remarks
			ZTH EU	PC-Tool	Belimo Assistant 2	
Operating data						
Actual value / Setpoint		m ³ /h / l/s / cfm	r	r	r	T (Trend) display
Damper position		Pa / %	—	T	T	
Simulation	Damper OPEN/CLOSE V'min / V'mid / V'max / Motor Stop		w	w	—	
Running times	Operating time, running time Ratio (relation)	h %	—	r	r	
Alarm messages	Setting range enlarged, Mech. overload, Stop&Go ratio too high		—	r/w	—	
Serial number	Device ID		r	r	r	Incl. production date
Type	Type designation		r	r	r	
Version display	Firmware, Config. table ID		r	r	—	
Configuration data						
Print, send			—	yes	yes	
Backup in file			—	yes	yes	
Log data / Logbook	Activities log		—	yes	—	Incl. complete setting data

Operating controls and indicators

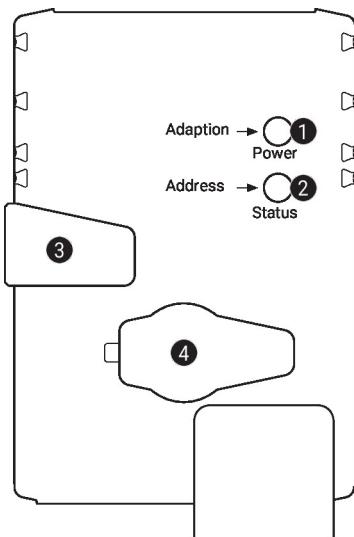

① Push-button and LED display green

Off: No power supply or malfunction
On: In operation
Press button: Triggers angle-of-rotation adaptation, followed by standard mode

② Push-button and LED display yellow

Off: Standard mode
On: Adaptation or synchronisation process active
Flickering: MP-Bus communication active
Flashing: Request for addressing from MP client
Press button: Confirmation of the addressing

③ Manual override button

Press button: Gear train disengages, motor stops, manual override possible
Release button: Gear train engages, synchronisation starts, followed by standard mode

④ Service plug

For connecting configuration and service tools

Check power supply connection

① Off and ② On


Possible wiring error in power supply

Installation notes

Installation situation	<p>Mounting VAV-Compact control equipment: The VAV-Compact is assembled, set and calibrated on the VAV unit in the factory by the VAV unit manufacturer.</p> <p>Installation of the VAV unit: The VAV unit must be installed according to the specifications of the VAV unit manufacturer.</p> <p>Installation specification Δp sensor: No restrictions, but it must be avoided that any condensation can run into the sensor and remain there.</p> <p>Accessibility of control equipment: Accessibility to the control equipment must be guaranteed at all times.</p> <p>Pressure tube connections: The pressure tube connections must not come into contact with liquids or greasing agents of any kind, this includes any residue inside or on the surface of the pressure tubes.</p>
Servicing	<p>Cleaning work during installation, commissioning or maintenance Belimo VAV devices are maintenance-free. We recommend dry removal of dust from the outside of the housing if necessary.</p> <p>The duct system and the VAV units are maintained on the occasion of the cleaning intervals required by law or by the specific system. Please observe the following points.</p> <p>Cleaning work on the damper, differential pressure pickup devices and pressure tubes When cleaning the duct system or the VAV unit, remove the pressure tubes on the VAV controller so that it will not be affected.</p> <p>Using compressed air, e.g. blowing out the differential pressure pickup devices or pressure tubes Before doing this work, disconnect the differential pressure pickup devices or pressure tubes from the differential pressure sensor.</p> <p>Connecting the pressure tubes To ensure the correct installation of the pressure tubes, we recommend marking them with + or - before disassembly.</p>


Service

Wireless connection Belimo devices marked with the NFC logo can be operated with Belimo Assistant 2.
Requirement:
- NFC- or Bluetooth-capable smartphone
- Belimo Assistant 2 (Google Play and Apple App Store)
Align NFC-capable smartphone on the device so that both NFC antennas are superposed.
Connect Bluetooth-enabled smartphone via the Bluetooth-to-NFC converter ZIP-BT-NFC to the device. Technical data and operating instructions are shown in the ZIP-BT-NFC data sheet.

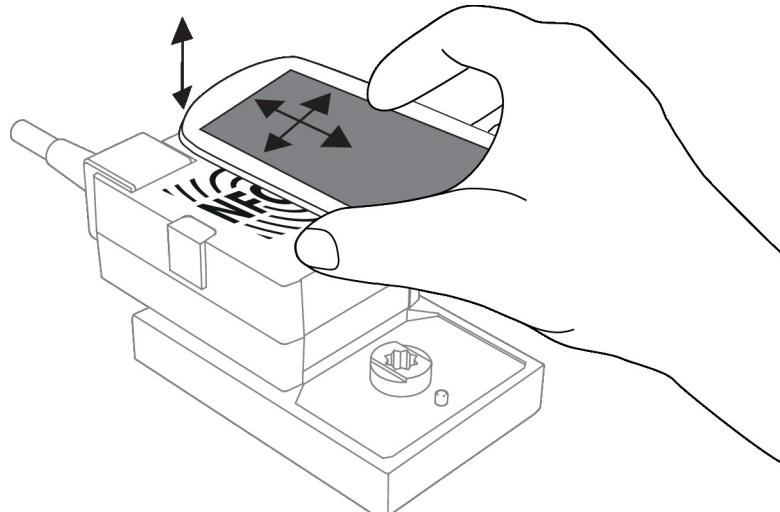


Wired connection The device can be configured by ZTH EU via the service socket.
For an extended configuration, Belimo Assistant 2 can be connected.

Connection ZTH EU / Belimo Assistant 2

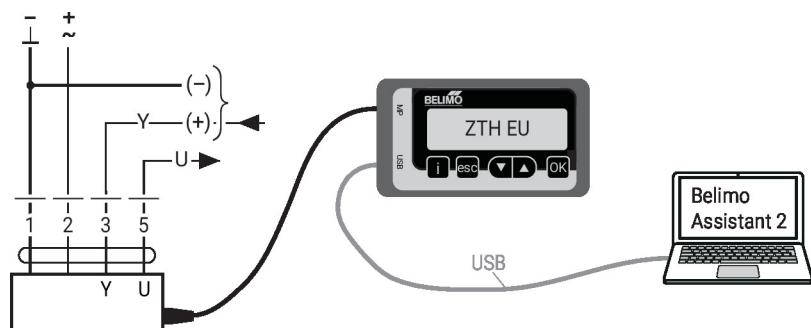

Dimensions

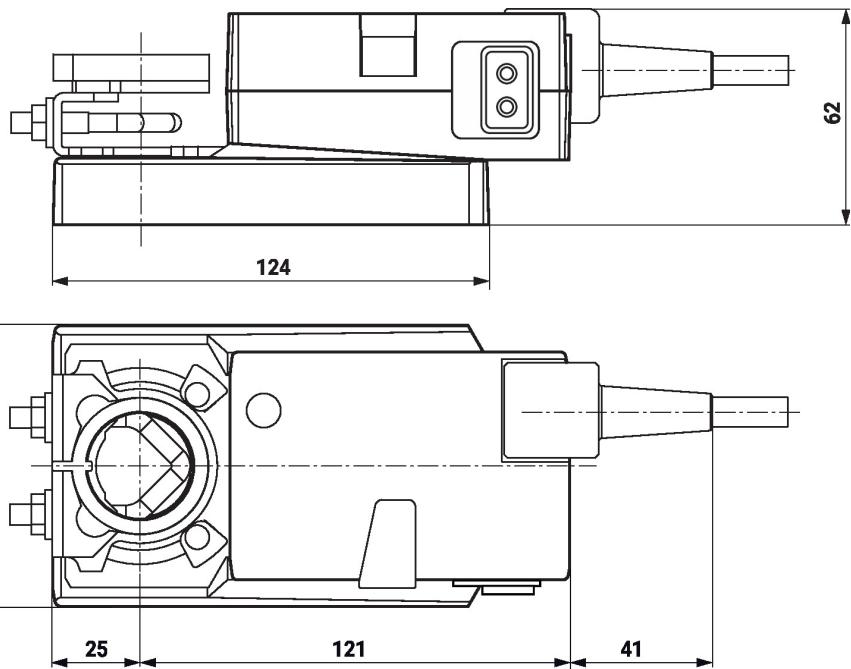

Further documentation

- VAV-Compact product range for comfort applications
- Tool connections
- Overview MP Cooperation Partners
- Introduction to MP-Bus Technology
- VAV-Universal application description
- Volumetric flow and pressure control from Belimo, product range overview
- Quick Guide – Belimo Assistant 2