

Configurable damper actuator in the IP66/67 protective housing for adjustment of dampers in HVAC plants, comparable industrial plants and technical building installations

- Air damper size up to approx. 3.2 m²
- Torque motor 16 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V variable
- Position feedback 2...10 V variable
- Running time motor 7 s variable
- Optimum weather protection for use outdoors (for use in ambient temperatures up to -40°C, there is a separate actuator available with built-in heater)



Picture may differ from product

Technical data

| Electrical data | Nominal voltage | AC/DC 24 V |
|-----------------|------------------------------------|---|
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 19.2...28.8 V / DC 21.6...28.8 V |
| | Power consumption in operation | 15 W |
| | Power consumption in rest position | 2 W |
| | Power consumption for wire sizing | 26 VA |
| | Inrush current (Imax) | 20.0 A @ 5 ms |
| | Connection supply / control | Cable 1 m, 4x 0.75 mm ² (halogen-free) |
| | Parallel operation | Yes (note the performance data) |
| Functional data | Torque motor | 16 Nm |
| | Torque variable | 25%, 50%, 75% reduced |
| | Operating range Y | 2...10 V |
| | Input impedance | 100 kΩ |
| | Operating range Y variable | Start point 0.5...30 V End point 2.5...32 V |
| | Operating modes optional | Open/close Modulating (DC 0...32 V) |
| | Position feedback U | 2...10 V |
| | Position feedback U note | Max. 0.5 mA |
| | Position feedback U variable | Start point 0.5...8 V End point 2.5...10 V |
| | Position accuracy | ±5% |
| | Direction of motion motor | selectable with switch 0/1 |
| | Direction of motion variable | electronically reversible |
| | Direction of motion note | Y = 0 V: At switch position 0 (ccw rotation) / 1 (cw rotation) |
| | Manual override | with push-button, can be locked (under protective housing) |
| | Angle of rotation | Max. 95° |
| | Angle of rotation note | can be limited on both sides with adjustable mechanical end stops |
| | Minimum angle of rotation | Min. 30° |
| | Running time motor | 7 s / 90° |
| | Running time motor variable | 7...35 s |
| | Sound power level, motor | 63 dB(A) |
| | Adaptation setting range | manual (automatic on first power-up) |

| | | |
|------------------------|--|---|
| Functional data | Adaptation setting range variable | No action Adaptation when switched on Adaptation after pushing the manual override button |
| | Override control | MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50% |
| | Override control variable | MAX = (MIN + 32%)...100% MIN = 0%...(MAX - 32%) ZS = MIN...MAX |
| | Mechanical interface | Universal shaft clamp 12...26.7 mm |
| | Position indication | Mechanical, pluggable |
| Safety data | Protection class IEC/EN | III, Safety Extra-Low Voltage (SELV) |
| | Power source UL | Class 2 Supply |
| | Degree of protection IEC/EN | IP66/67 |
| | Degree of protection NEMA/UL | NEMA 4X |
| | Housing | UL Enclosure Type 4X |
| | EMC | CE according to 2014/30/EU |
| | Low voltage directive | CE according to 2006/95/EC |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 |
| | UL Approval | cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case |
| | Type of action | Type 1 |
| | Rated impulse voltage supply / control | 0.8 kV |
| | Pollution degree | 4 |
| | Ambient humidity | Max. 100% RH |
| | Ambient temperature | -30...40°C [-22...104°F] |
| | Ambient temperature note | Caution: 40...50°C [104...122°F] utilisation possible only under certain restrictions. Please contact your supplier. |
| | Storage temperature | -40...80°C [-40...176°F] |
| | Servicing | maintenance-free |
| Weight | Weight | 3.6 kg |

Safety notes




- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- Junction boxes must at least correspond with housing IP degree of protection!
- The cover of the protective housing may be opened for adjustment and servicing. When it is closed afterwards, the housing must seal tight (see installation instructions).
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The cables must not be removed from the device installed in the interior.
- Self adaptation is necessary when the system is commissioned and after each adjustment of the angle of rotation (press the adaptation push-button once).
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section and the design, as well as the installation situation and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The device is not designed for applications where chemical influences (gases, fluids) are present or for utilisation in corrosive environments in general.
- The actuator may not be used in plenary applications (e.g. suspended ceilings or raised floors).
- The materials used may be subject to external influences (temperature, pressure, construction fastening, effect of chemical substances, etc.), which cannot be simulated in laboratory tests or field trials. In case of doubt, we definitely recommend that you carry out a test. This information does not imply any legal entitlement. Belimo will not be held liable and will provide no warranty.
- Flexible metallic cable conduits or threaded cable conduits of equal value are to be used for UL (NEMA) Type 4X applications.
- When used under high UV loads, e.g. extreme sunlight, the use of flexible metallic or equivalent cable conduits is recommended.

Product features

| | |
|-------------------------------|--|
| Fields of application | The actuator is particularly suitable for utilisation in outdoor applications and is protected against the following weather conditions: - UV radiation - Rain / Snow - Dirt / Dust - Air humidity - Alternating climate / frequent and severe temperature fluctuations (Recommendation: use the actuator with integrated factory-installed heating which can be ordered separately to prevent internal condensation) |
| Operating mode | The actuator is connected with an analogue control signal Y (note the operating range) and drives to the position defined. The measuring voltage U serves for the electrical display of the damper position 0...100% and as control signal for other actuators. |
| Configurable device | The factory settings cover the most common applications. Single parameters can be modified with Belimo Assistant 2 or ZTH EU. |
| Simple direct mounting | Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti-rotation mechanism to prevent the actuator from rotating. |
| Manual override | Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked). The housing cover must be removed for manual override. |

Product features

| | |
|-------------------------------------|---|
| Adjustable angle of rotation | Adjustable angle of rotation with mechanical end stops. A minimum permissible angle of rotation of 30° must be allowed for. The housing cover must be removed to set the angle of rotation. |
| High functional reliability | The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached. |
| Home position | <p>The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaptation, which is when the operating range and position feedback adjust themselves to the mechanical setting range.</p> <p>The detection of the mechanical end stops enables a gentle approach to the end positions, thus protecting the actuator mechanics.</p> <p>The actuator then moves into the position defined by the control signal.</p> |



| | |
|---------------------------------------|--|
| Adaptation and synchronisation | <p>An adaptation can be triggered manually by pressing the "Adaptation" button or with Belimo Assistant 2. Both mechanical end stops are detected during the adaptation (entire setting range).</p> <p>Automatic synchronisation after pressing the manual override button is configured. The synchronisation is in the home position (0%).</p> <p>The actuator then moves into the position defined by the control signal.</p> <p>A range of settings can be made using Belimo Assistant 2.</p> |
|---------------------------------------|--|

Accessories

| Tools | Description | Type |
|------------------------|---|--------------------|
| | Service tool, with ZIP-USB function, for configurable and communicative Belimo actuators, VAV controller and HVAC performance devices | ZTH EU |
| | Service tool for wired and wireless setup, on-site operation and troubleshooting. | Belimo Assistant 2 |
| | Adapter for Service-Tool ZTH | MFT-C |
| | Belimo Assistant Link Bluetooth and USB to NFC and MP-Bus converter for configurable and communicative devices | LINK.10 |
| Electrical accessories | Description | Type |
| | Auxiliary switch 2x SPDT add-on, grey | S2A GR |
| | Feedback potentiometer 140 Ω add-on | P140A |
| | Feedback potentiometer 1 kΩ add-on | P1000A |
| | Feedback potentiometer 10 kΩ add-on | P10000A |
| | Adapter for auxiliary switch and feedback potentiometer, Multipack 20 pcs. | Z-SPA |
| | Signal converter voltage/current 100 kΩ 4...20 mA, Supply AC/DC 24 V | Z-UIC |
| | Positioner for wall mounting | SGA24 |
| | Positioner for built-in mounting | SGE24 |
| | Positioner for front-panel mounting | SGF24 |
| | Positioner for wall mounting | CRP24-B1 |
| Mechanical accessories | Description | Type |
| | Cable gland for cable diameter ø4...10 mm | Z-KB-PG11 |
| Options ex works only | Description | Type |
| | Heater, with adjustable thermostat | HT24-MG |
| | Heater, with mechanical humidistat | HH24-MG |

Electrical installation



Supply from isolating transformer.
Parallel connection of other actuators possible. Observe the performance data.

Wire colours:


1 = black

2 = red

3 = white


5 = orange

AC/DC 24 V, modulating

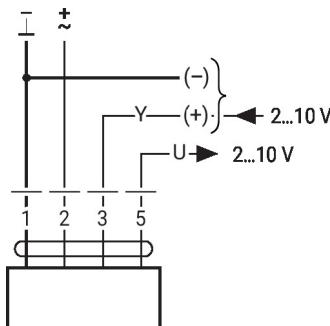


| | | | | |
|---|---|---|------|---|
| 1 | 2 | 3 | 2 V | 0 |
| — | — | — | 2 V | 0 |
| — | — | — | 10 V | 0 |

Signal cable lengths

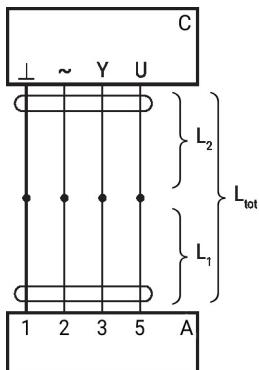

| L ₂ — / ~ | L _{tot} = L ₁ + L ₂ | |
|-------------------------|--|-------|
| | AC | DC |
| 0.75 mm ² | ≤30 m | ≤5 m |
| 1.00 mm ² | ≤40 m | ≤8 m |
| 1.50 mm ² | ≤70 m | ≤12 m |
| 2.50 mm ² | ≤100 m | ≤20 m |

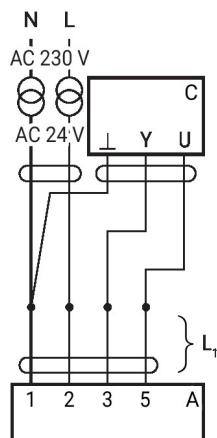

A = Actuator
 C = Control unit (controlling unit)
 L1 = Connecting cable of the actuator

Note:

There are no special restrictions on installation if the supply and the data cable are routed separately.

A = Actuator
 C = Control unit (controlling unit)
 L1 = Connecting cable of the actuator
 L2 = Customer cable
 Ltot = Maximum signal cable length


Note:

When several actuators are connected in parallel, the maximum signal cable length must be divided by the number of actuators.

Further electrical installations


Functions with basic values (conventional mode)

Override control with AC 24 V with relay contacts

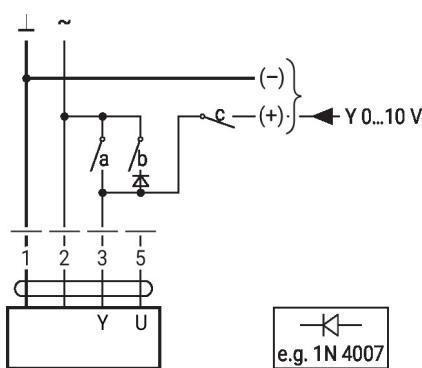



| 1 | 2 | a | b | c | |
|---|---|---|---|---|--------|
| — | — | — | — | — | 0 % |
| — | — | — | — | — | ZS 50% |
| — | — | — | — | — | 100 % |
| — | — | — | — | — | Y |

Override control with AC 24 V with rotary switch

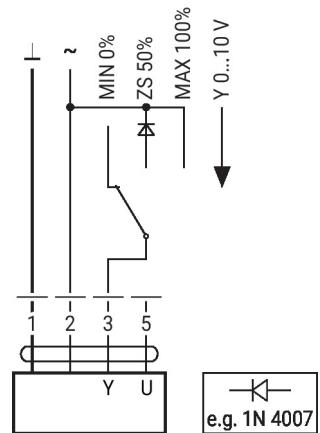


Control remotely 0...100% with positioner SG..

Minimum limit with positioner SG..

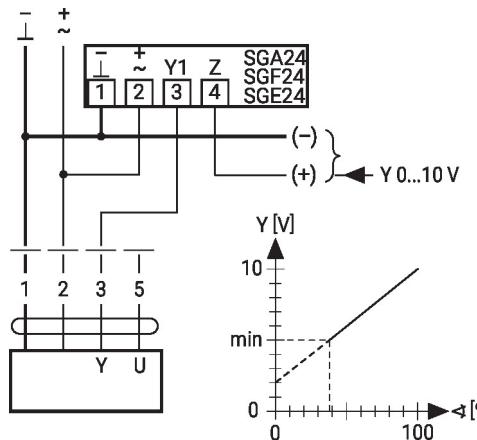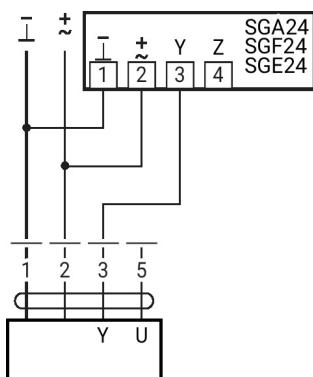


Primary/secondary operation (position-dependent)

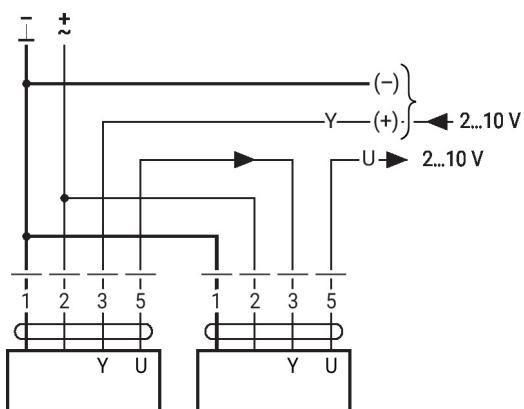

Functions with basic values (conventional mode)


Control with 4...20 mA via external resistor

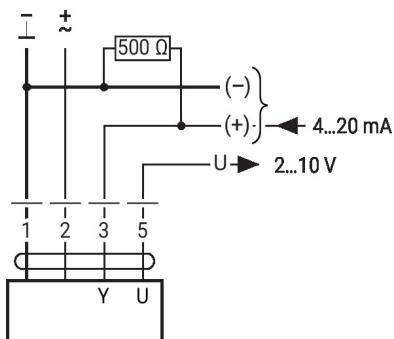

Caution:

The operating range must be set to DC 2...10 V.
 The 500 Ohm resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V.

Functional check

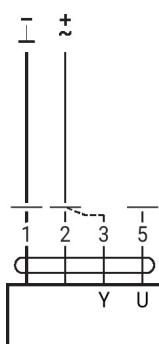


Procedure

1. Connect 24 V to connections 1 and 2
2. Disconnect connection 3:
 - With direction of rotation 0: Actuator rotates to the left
 - With direction of rotation 1: Actuator rotates to the right
3. Short-circuit connections 2 and 3:
 - Actuator runs in opposite direction

Functions with specific parameters (configuration necessary)


Override control and limiting with AC 24 V with relay contacts

Control open/close

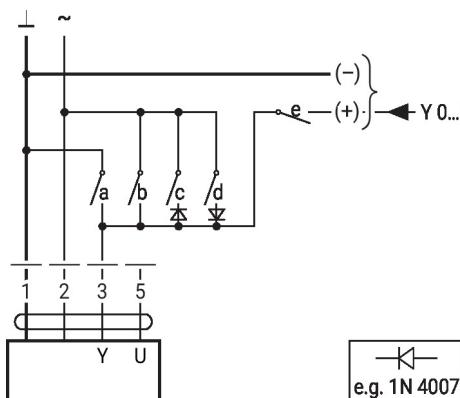

e.g. 1N 4007


| 1 | 2 | a | b | c | d | e | |
|---|---|---|---|---|---|---|-------|
| — | — | — | — | — | — | — | Close |
| — | — | — | — | — | — | — | MIN |
| — | — | — | — | — | — | — | ZS |
| — | — | — | — | — | — | — | MAX |
| — | — | — | — | — | — | — | Open |
| — | — | — | — | — | — | — | Y |

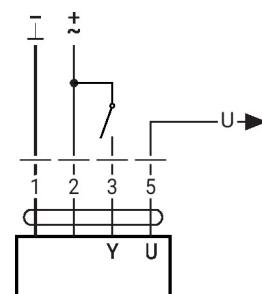

Further electrical installations


Functions with specific parameters (configuration necessary)

Override control and limiting with AC 24 V with rotary switch

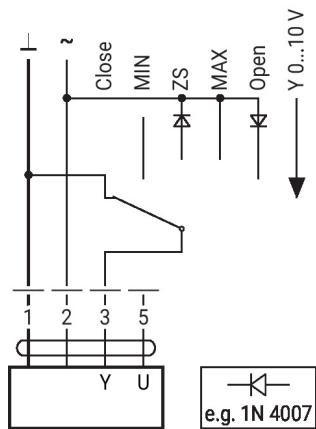**Caution:**

The "Close" function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.

Operating controls and indicators

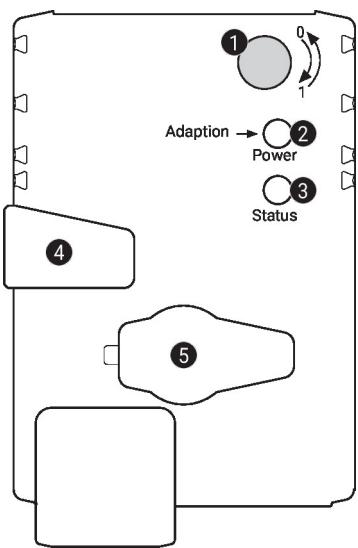**1 Direction-of-rotation switch**

Switch over: Direction of rotation changes

2 Push-button and LED display green

Off: No power supply or malfunction

On: In operation

Press button: Triggers angle-of-rotation adaptation, followed by standard mode

3 Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Press button: No function

4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible


Release button: Gear train engages, synchronisation starts, followed by standard mode

5 Service plug

For connecting configuration and service tools

Check power supply connection

2 Off and **3** On Possible wiring error in power supply

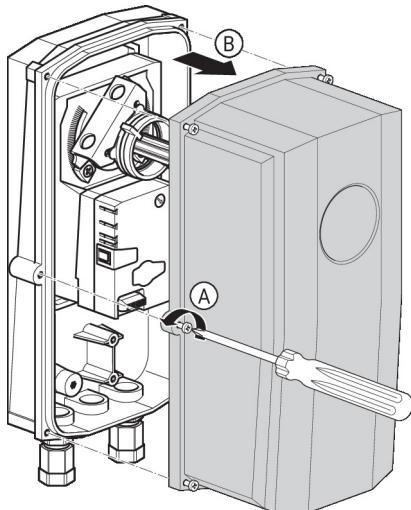

Installation notes

Negative torque Max. 50% of the torque (Caution: Application possible only with restrictions. Please contact your supplier.)


Service

Wired connection

The device can be configured by ZTH EU via the service socket.

For an extended configuration, Belimo Assistant 2 can be connected.

Connection ZTH EU / Belimo Assistant 2

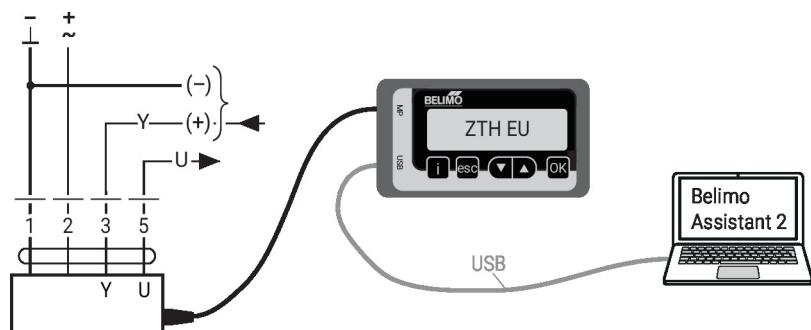



Dimensions

Spindle length

| | | |
|--|---------|--|
| | - | |
| | 16...75 | |

Clamping range

| | | |
|-----------|---------|--|
| | | |
| 12...22 | 12...18 | |
| | | |
| 22...26.7 | 12...18 | |

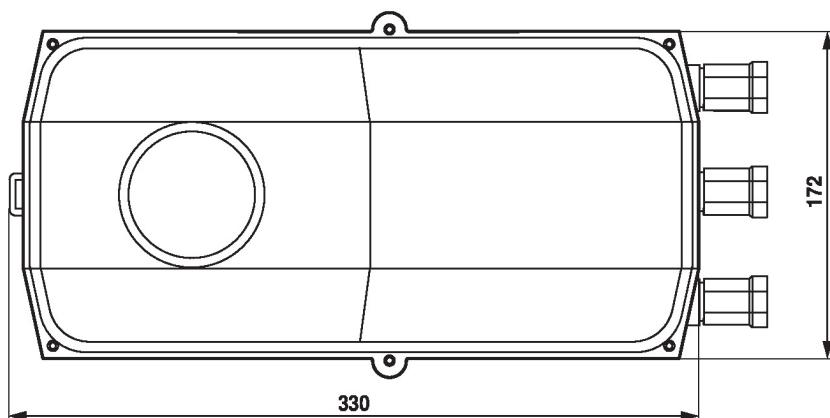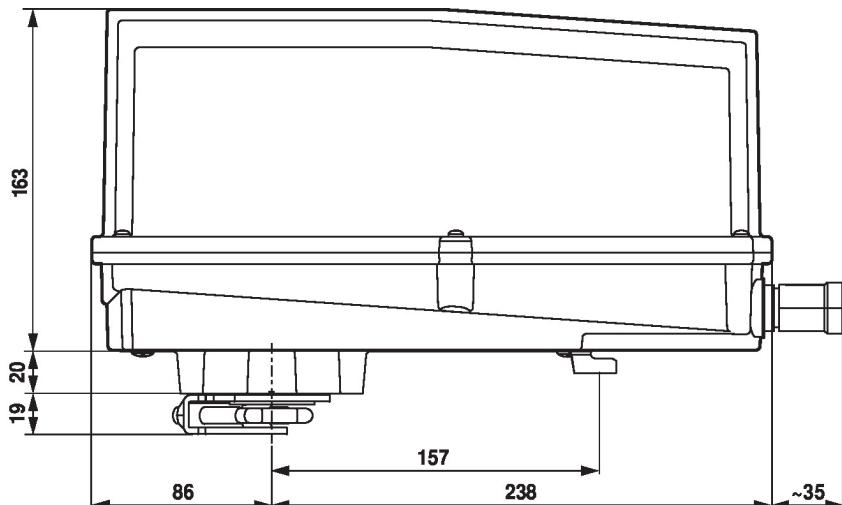

Further documentation

- Quick Guide – Belimo Assistant 2