
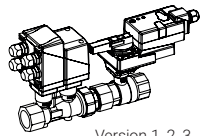


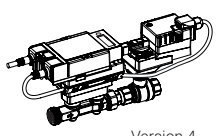

Data-Pool Values

Where is the Ethernet socket?	
On the actuator	On the flow sensor
 <p>Version 1, 2, 3</p>	 <p>Version 4</p>
<p> See „Data-Pool Values Energy Valve (V1, V2, V3)“</p>	<p>Stay with this document </p>
<p>For guidance in replacing an old EV with EV V4 -> see “Replacement Guide V1, V2, V3 vs. V4”</p>	

Energy Valve DN 15...50 (Version 4)

Edition 2025-03 / V4.2.1

Content

General notes

General information	
Power-on behaviour	
Configuration	
Identification	3
Interface version	
Data access	
Timing of MP-Bus queries	
Signed integer	

Values overview

Operation	4
Service	5

Values descriptions

Control and general settings	6
Flow	7
Power	8
Energy	
Differential pressure	
Temperature	9
Conversion of sensor signals	
Delta T manager	10
Health state	11

Data-pool general notes

General information

- The device supports the MP Data-Pool functional profile. All available data points are managed in a data pool and accessible with MP read/write commands.
- This document describes all public data pool values of the device. It's divided into process values and configuration values.
- The MP Data-Pool functional profile is specified in the MP Cooperation Documentation. The document is provided to Belimo MP-Partners.
- See the technical datasheet for technical information about the device itself.

Power-on behaviour

The initialization of the data after power fail takes up to 190 seconds. All values remain 0 during power-on.

Configuration

Tool Belimo Assistant 2 or web browser

Identification

The connected type can be identified by its series number:

Prefix	Profile type	Profile category	Type
2	1	22	EV..R2+..

Interface version

This description is valid for these models:

Product Model Number	Remark
EV..R2+(K)BAC	Version 4, DN 15...50
EV..R2+MID	Version 4, DN 15...50
EV..R3+BAC	Version 4, DN 15...50

Data access

Configuration data are not password protected. No login is required.

Timing of MP-Bus queries

Client implementations typically poll the servers in cycles (MP1, MP2, MP3, ...). Reading all data pool values of this node in one cycle are not recommended, because it would reduce the overall MP-Bus performance.

Recommendation:

- Split up the queries into several cycles (e.g. 3 queries per cycle).
- Adjust repetition rates (reading values) according to the rate of change of the value.
- Prevent from reading unused data pool values.

Signed integer

Signed integers are represented as two's complement.

Example:

Value of ID 40 = 1111 1101 1111 0010₂ = -526₁₀

Actual value
 = value * scaling factor * unit
 = -526 * 0.01 * unit
 = **-5.26 unit**

Values overview

Operation

ID	Name	Access
10	Setpoint Relative [%]	R / W
11	Command	R / W
12	Relative Position [%]	R
13	Absolute Position [°]	R
14	Override Control	R / W
15	Sensor 1 Value [mV] [Ω] [-]	R
16	Setpoint Analog [%]	R
19	Relative Volumetric Flow [%]	R
20	Absolute Volumetric Flow [l/s]	R
22	Absolute Volumetric Flow [selected unit]	R
26	Glycol Concentration [%]	R
27	Temperature 1 (remote) [°C]	R
29	Temperature 2 (flow body) [°C]	R
31	Delta Temperature [K]	R
33	Relative Power [%]	R
34	Absolute Power Cooling [kW]	R
37	Absolute Power Heating [kW]	R
51	Accumulated Volume [m ³]	R
54	Absolute Energy Cooling [kWh]	R
57	Absolute Energy Heating [kWh]	R
62	Nominal Differential Water Pressure [kPa]	R
65	Absolute Differential Water Pressure Setpoint [kPa]	R / W
68	Absolute Differential Water Pressure [kPa]	R
69	Relative Differential Water Pressure [%]	R
72	Error State	R

Definition Access: R = Read, W = Write

Service

ID	Name	Access
110	Malfunction & Service Information	R
111	Control Mode	R / W
115	Bus Fail Action [%]	R / W
116	Timeout for Bus Watchdog [s]	R / W
117	Setpoint Source	R / W
120	Sensor 1 Type	R / W
125	Minimum Volumetric Flow Limit (V'_{min}) [%]	R / W
129	Maximum Volumetric Flow Limit (V'_{max}) [%]	R / W
133	Nominal Volumetric Flow [l/s]	R
140	Nominal Power (P'_{nom}) [kW]	R
143	Maximum Power Limit (P'_{max}) [%]	R / W
147	Delta T Limitation	R / W
148	Delta T Manager Status	R
151	Unit Selection Flow	R
160	Setpoint Delta Temperature [K]	R / W
162	Setpoint Absolute Flow at DeltaT [l/s]	R / W
200	Energy Meter Serial Number First Digits	R
201	Energy Meter Serial Number Last Digits	R
202	Select Meter Register	R / W

Definition Access: R = Read, W = Write



All writeable datapoints with ID >100 (configuration data) are persistent and are **not** supposed to be written on a regular basis. Designated data points are highlighted in colour in the document.

Values descriptions

Control and general settings

These data-pool values can be used to control and configure the fundamental functionalities and read the corresponding feedback values of the Energy Valve.

No.	Description Comments	Unit	Scaling	Values	Size	Access
10	Setpoint relative The setpoint is related to either the position, the volumetric flow (of V'_{min} , V'_{max}) or the power (of P'_{max}). It is scaled between Min and Max limits. The setpoint is active, if the setpoint is controlled by ID 117: Setpoint Source = 1: Bus See also ID 125, 129, 143.	%	0.01	0...10'000	2	R / W
16	Setpoint analog Shows the setpoint in % if the actuator is controlled by ID 117: Setpoint Source = 0: Analog. Not considered if forced control (bus, tool and/or analog forced control) is active.	%	0.01	0...10'000	2	R
12	Relative position	%	0.01	0...10'000	2	R
13	Absolute position	–	0.01	0...9'600	2	R
117	Setpoint source Analog: Setpoint from analog signal 0.5...10 V on wire 3 Bus: Setpoint via MP-Bus ID 10: Setpoint Relative	–	–	0: Analog 1: Bus Default: 0	1	R / W
111	Control mode This value defines the interpretation of the setpoint. A reset will be performed, if the state of this object is changed.	–	–	0: Position control 1: Flow control 2: Power control 3: Differential pressure control Default: 1	1	R / W
14	Override control Overriding the setpoint with defined values	–	–	0: None 1: Open valve 2: Close valve 3: Minimum flow 4: – 5: Maximum flow 6: Nominal flow 7: – 8: – 9: – 10: Motor stop Default: 0	1	R / W
11	Command Initiation of actuator functions for service. After command is sent, value changes back to 0: None	–	–	0: None 1: – 2: Sync.	1	R / W
115	Bus fail action In the event of a breakdown in communication, the actuator enables the bus fail action. The bus monitoring controls the MP-Bus communication. If neither ID 10: Setpoint Relative nor ID 14: Override Control renewed before the Timeout for ID 116: Bus Watchdog, the actuator controls to the Bus Fail position. Triggered bus monitoring is indicated in ID 72: Error State.	–	–	0: None 1: Open 2: Close 3: Max 4: Min 5: – 6: Stop Default: None	1	R / W
116	Timeout for bus watchdog If no write request is received within the timeout, the device will execute the action defined in ID 115: Bus fail action.	s	1	5...3'600 Default: 120	2	R / W

Flow

These registers can be used to configure and read values related to Flow control.
For setpoint see ID 10: Relative Setpoint in section "Control and general settings".

No.	Description Comments	Unit	Scaling	Values	Size	Access
19	Relative volumetric flow Related to V'_{max} ID 129: Maximum Volumetric Flow Limit	%	0.01	0...15'000	2	R
20	Absolute volumetric flow Sensor reading up to $2,5 * V'_{nom}$ possible. Make sure to use the device within the specified parameters (see datasheet).	l/s	0.01	0...1'575	2	R
22	Absolute volumetric flow in selected unit Sensor reading up to $2,5 * V'_{nom}$ possible. Make sure to use the device within the specified parameters (see datasheet). → Unit can be selected by ID 151: Unit selection flow	UnitSel	0.001	0...15 m ³ /s 0...56'750 m ³ /h 0...15'762 l/s 0...945'832 l/min 0...56'750'000 l/h 0...249'862 gpm 0...33'400 cfm	4	R
151	Unit selection flow	–	1	0: m ³ /s 1: m ³ /h 2: l/s 3: l/min 4: l/h 5: gpm 6: cfm	1	R / W
125	Minimum volumetric flow limit (V'_{min})	%	0.01	0... V'_{max}	2	R / W
129	Maximum volumetric flow limit Maximum volumetric flow related to V'_{nom} "Nominal Volumetric Flow". Considered when ID 111: Control Mode = 1: Flow Control or = 2: Power Control. Values below 25% will be adjusted to 25%.	%	0.01	2'500...10'000 Default: 10'000	2	R / W
133	Nominal volumetric flow (V'_{nom})	l/s	0.01	0...10'000	2	R
26	Glycol concentration	%	0.01	0...6'000	2	R
51	Accumulated volume	m ³	0.01	0...21'474'836	4	R

Power

These data-pool values can be used to configure and read values related to the Power Management.
For Power Setpoint see ID 10: Relative Setpoint in section "Control and general settings".

No.	Description Comments	Unit	Scaling	Values	Size	Access
33	Relative power Related to P _{max} ID 143: Maximum Power Limit	%	0.01	0...30'000	2	R
34	Absolute power cooling	kW	0.001	0...3'990'000	4	R
37	Absolute power heating	kW	0.001	0...3'990'000	4	R
143	Maximum power limit (P _{max}) The maximum power limit setpoint in % is related to P _{nom} ID 140: Nominal Power and considered when ID 111: Control Mode = 2: Power Control.	%	0.01	50...10'000	2	R / W
140	Nominal power (P_{nom})	kW	0.001	0...1'330'000	4	R

Energy

These data-pool values can be used to configure and read values related to the energy monitoring function.

No.	Description Comments	Unit	Scaling	Values	Size	Access
54	Absolute energy cooling	kWh	1	0...21'474'836	4	R
57	Absolute energy heating	kWh	1	0...21'474'836	4	R
202	Select meter register Value 0 only available for models with MID certification: EV..R2+MID. For non MID certified models value 1 is defined as default. Select between certified meter register and lifetime register. 0: The certified meter register will be reset when the sensor module is replaced. 1: The lifetime register is compensated for glycol (if applicable). Avoid toggling between the two registers. The setting influences metering of volume and energy. Following IDs depend on the selected meter register: ID 51: Accumulated Volume [m ³] ID 54: Absolute Energy Cooling [kWh] ID 57: Absolute Energy Heating [kWh]	-	-	0: Certified meter register 1: Lifetime meter register	1	R / W
200	Energy meter serial number first digits ProductionOrderNumber	-	-	0...2'147'483'647	4	R
201	Energy meter serial number last digits ProductionSequenceNumber	-	-	0...2'147'483'647	4	R

Differential pressure

These data-pool values can be used to configure and read values related to the differential pressure control functionality. Differential pressure control is only available for 2-way applications.

No.	Description Comments	Unit	Scaling	Values	Size	Access
65	Setpoint absolute differential water pressure	kPa	0.01	1000...40'000	4	R / W
69	Relative differential water pressure Relative to differential water pressure setpoint max	%	0.01	0...10'000	4	R
68	Absolute differential water pressure	kPa	0.01	0...60'000	4	R
62	Nominal differential water pressure Value range is related to selected differential water pressure sensor type	kPa	0.01	0...60'000	4	R

Temperature

The measured temperature values can be read out via the data-pool values below.

No.	Description Comments	Unit	Scaling	Values	Size	Access
27	Temperature 1 (remote)	°C	-2'000...15'000	-2'000...15'000	2	R
29	Temperature 2 (flow body)	°C	-2'000...15'000	-2'000...15'000	2	R

Conversion of sensor signals

These data-pool values can be used to configure the additional Sensor 1 Input on Y3 and read values related to.

No.	Description Comments	Unit	Scaling	Values	Size	Access
15	Sensor 1 value The conversion of passive sensors can be selected by ID 120: Sensor 1 type. Scaling depends on the sensor type PT1000 / Ni1000 → 1 NTC10K → 10	mV Ω –		0...65'535	2	R
120	Sensor 1 type Additional sensor input Only selectable if ID 117: Setpoint Source = 1: Bus	–	–	0: None 1: Active 2: – 3: Passive 4: Switch Default: 0	1	R / W

Delta T manager

These data-pool values can be used to specify the delta T manger functionality and read the corresponding values.

No.	Description Comments	Unit	Scaling	Values	Size	Access
160	Setpoint delta temperature Considered when delta T limitation active (not disabled). Check datasheet for further information.	K	0.01	0...5'500	2	R / W
31	Delta temperature	K	0.01	0...45'000	2	R
162	Setpoint absolute flow at delta temperature Considered when delta T limitation is set to delta T manager-scaled. Check datasheet for further information.	l/s	0.001	0...100'000	4	R / W
148	Delta T manager status 1: Delta T manager activated but not active 2: Delta T manager active 3: Delta T manager active with no limitation to flow 4: Delta T manager active with limitation to flow ID 162: Setpoint absolute flow at delta T	–	–	0: Not selected 1: Standby 2: Active 3: Scaling-standby 4: Scaling-active	1	R
147	Delta T limitation 0: Delta T manager not active 1: Delta T manager active with no restriction to flow 2: Delta T manager active with limitation to flow ID 162: Setpoint absolute flow at delta T	–	–	0: Disabled 1: DeltaT-Manager 2: DeltaT-Manager-Scaled	1	R / W

Health state

These data-pool values allow to determine malfunctions, service information and error states of the Energy Valve.

No.	Description Comments	Unit	Scaling	Values	Size	Access
72	<p>Error State</p> <p>Value is bit-coded. More than one bit can be set to 1. Not all bits mentioned in the enumeration are used for this product range.</p> <p>0: Communication with actuator not possible. 1: Gear train disengaged button is pressed 2: Mechanical overload due to blocked valve, etc. (only available for EV..R+KBAC) 3: Reverse flow is detected 4: Setpoint cannot be reached within 15 min during flow control 5: Flow is measured but position of valve is closed 6: Actual flow exceeds the designed nominal flow 7: Air in the system, error occurred during flow measurement 8: No connection to external temperature sensor 9: Flowbody temperature error: Error with embedded temperature sensor 10: Internal communication to flow sensor interrupted 11: Measured temperature & glycol concentration indicate that grease ice can build up 12: Glycol was detected in a MID application 13: Setpoint cannot be reached within 15 min during power control 14: MID only. The sensor module must be replaced. 15: No Update of Setpoint / Override within specified time, independent of configured Bus Fail Action. 16: No differential pressure detected within 5 min during pressure control 17: Differential pressure setpoint can not be reached within 15 min during pressure control mode 18: Minimum position (27%) is applied if: – The valve is restarted – After a power failure – The manual override was previously operated – Switching from another control mode (e.g. flow control) to control mode differential pressure control – No differential pressure is present at a flow rate $< 0.7\% V'_{nom}$</p>	–	–	<p>Bitmask =</p> <p>0: No communication to actuator 1: Gear train disengaged 2: Actuator cannot move 3: Reverse flow 4: Flow setpoint not reached 5: Flow with closed valve 6: Flow actual exceeds flow nominal 7: Flow measurement error 8: Remote temperature error 9: Flowbody temperature error 10: Communication to sensor interrupted 11: Freeze warning 12: Glycol detected 13: Power setpoint not reached 14: Device end of life reached 15: Bus watchdog triggered 16: No differential pressure detected 17: Differential pressure setpoint can not be reached 18: Minimum position applied</p>	4	R
110	<p>Malfunction and service information</p> <p>Bit 0..15 of ID 72: Error State corresponds with ID 110 for legacy devices. See also Interface Description for older versions of this device.</p>	–	–	–	2	R

Definition Access: R = Read, W = Write

Note: According to the present configuration settings of the Energy Valve (e.g. DN size) the HVAC application may perform a size limitation within the indicated MP-Bus value range. Each Energy Valve may have different HVAC value size limitations.

All inclusive.

Belimo is the global market leader in the development, production, and sales of field devices for the energy-efficient control of heating, ventilation and air-conditioning systems. The focus of our core business is on damper actuators, control valves, sensors and meters.

Always focusing on customer value, we deliver more than only products. We offer you the complete product range for the regulation and control of HVAC systems from a single source. At the same time, we rely on tested Swiss quality with a five-year warranty. Our worldwide representatives in over 80 countries guarantee short delivery times and comprehensive support through the entire product life. Belimo does indeed include everything.

The “small” Belimo devices have a big impact on comfort, energy efficiency, safety, installation and maintenance.

In short: Small devices, big impact.



5-year warranty



On site around the globe



Complete product range



Tested quality



Short delivery times



Comprehensive support



BELIMO Automation AG

Brunnenbachstrasse 1, 8340 Hinwil, Switzerland
+41 43 843 61 11, info@belimo.ch, www.belimo.com

